

30-158

Metallic Lining

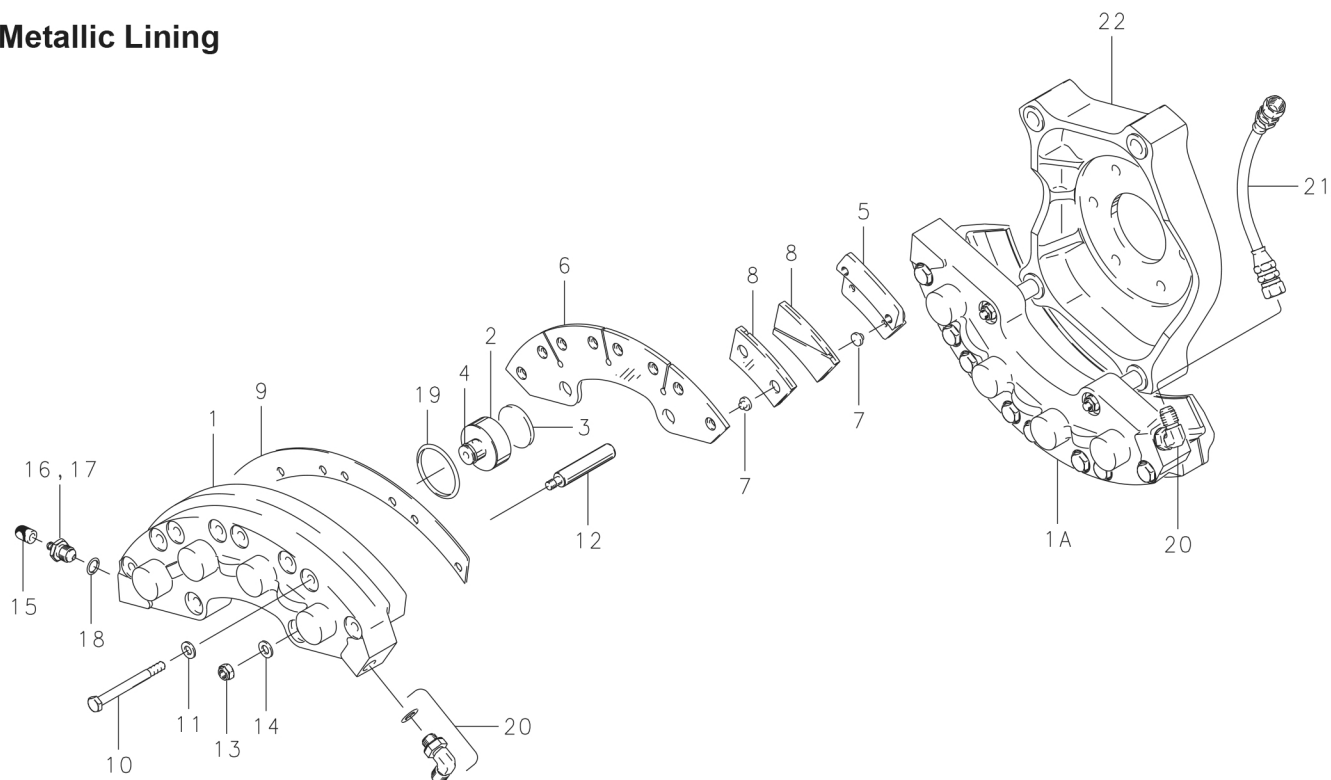


FIG.	PART NO.	DESCRIPTION	30-158
1	091-09400 (1)	Cylinder Assembly	1
	061-07000 (1)	Cylinder	1
1A	091-09401 (2)	Cylinder Assembly	1
	061-07001 (2)	Cylinder	1
	092-03900	Piston Assembly	8
2	062-03800	Piston	8
3	088-00400	Insulator	8
4	082-02000	Friction Spring	8
	074-03400	Back Plate Assembly	8
5	064-02700	Back Plate	8
7	177-01600	Pin	8
	073-04300	Pressure Plate Assembly	2
6	063-03100	Pressure Plate	2
7	177-01600	Pin	8
8	066-06800	Lining	16

FIG.	PART NO.	DESCRIPTION	30-158
9	068-03100	Shim-Insulator	2
10	104-14400	Bolt (AN4H23A)	16
11	095-10400	Washer (AN960-416)	16
12	069-00400	Anchor Bolt	4
13	094-10300	Nut (MS21044-N4)	4
14	095-10200	Washer (AN960-416L)	4
15	183-00100	Cap-Bleeder	1
16	079-00300	Screw-Bleeder	1
17	081-00200	Seat-Bleeder	1
18	101-00700	O-Ring (MS28775-012)	1
19	101-02500	O-Ring (MS28775-220)	8
20	104-03100	Fitting	2
21	207-00800	Hose Assembly	1
22	075-16600	Torque Plate Assembly	1

NOTES:

- (1) 091-09400 Cylinder Assembly leads on LH Gear, trails on RH Gear.
- (2) 091-09401 Cylinder Assembly trails on LH Gear, leads on RH Gear.