

AIRCRAFT WHEEL & BRAKE DIVISION  
 PARKER HANNIFIN CORPORATION  
 AVON, OHIO

PARTS LIST

199-80 CONVERSION KIT

ROCKWELL COMMANDER MODELS

560F, 680F, 680FL, 680FL(P), 680T, 680V, 680W,  
 681, 685, 690, 690A, 690B, 690C, 690D, 695, 695A, 695B

<u>PART NUMBER</u>	<u>DRAWING REVISION</u>	<u>DESCRIPTION</u>	<u>QUANTITY</u>
30-107E	Rev. NC dated 12-20-2001	Brake Assembly	2
40-107A	Rev. J dated 06-13-2005	Wheel Assembly	2
103-22100	-----	Bolt (AN5-10A)	24
095-10500	-----	Washer (AN960-516)	48
094-10400	-----	Nut (MS21044-N5)	24

Publication Package (P/N PP199-08000)


50-51	Rev. L dated 02-04-2002	Installation Drawing
40-107 / 30-107	Rev. G dated 02-01-2002	Maintenance Manual
SA497GL	Last amend date 1-8-86	Supplemental Type Certificate
PRM14A	-----	Metallic Brake Lining Conditioning Procedure
PRM69	-----	General Maintenance Information
-----		Product Registration Card

**NOTES:**

1. This kit will convert one aircraft to Cleveland Wheels and Brakes.
2. For use with MIL-H-5606 (Red Fluid).

199-80	REV. NC	07-17-1979
	REV. A	07-23-1979
	REV. B	09-14-1979 (263-90)
	REV. C	11-06-1979 (264-18)
	REV. D	11-21-1980 (266-30)
	REV. E	12-10-1980
	REV. F	05-18-1981 (267-60)
	REV. G	12-14-1984 (275-39)
	REV. H	12-16-1985 (277-34)
	REV. J	02-04-2002 (0349-24)
	REV. K	04-18-2007 (0374-53)

SKETCH

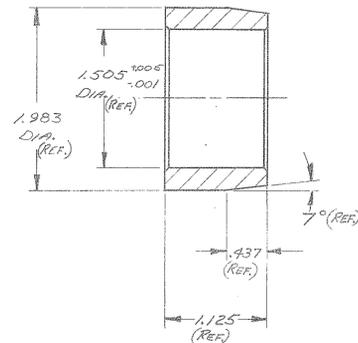


INSTRUCTIONS

1. KIT 199-80 APPLIES TO THE FOLLOWING MODELS OF AERO COMMANDER USING RED OIL:

MODEL	TIRE SIZE	PLY RATING	TYPE	PRESSURE
680F, 680FL, 680P, 680PL, 685F, 685FL, 685P, 685PL, 685W	8.50-10 TYPE III	6/8	TUBELESS TUBE TYPE	41/55 PSI
681, 690, 690A, 690B, 690C, 695, 695B	8.50-10 TYPE III	10	TUBELESS OR TUBE TYPE	70 PSI
695A, 690D	24 x 7.7 TYPE VII	16	TUBELESS OR TUBE TYPE	90 PSI

- MOUNT TIRES ON WHEELS AND INFLATE PER ABOVE. WHEEL ASSEMBLY 40-107A INCLUDES TUBELESS VALVE AND WHEEL SEAL.
- JACK UP AIRCRAFT PER MANUAL. REMOVE AND DISCARD EXISTING MAIN GEAR WHEELS. RETAIN AXLE NUT, WASHER AND SPACER. (VERIFY THAT SPACER IS ED10314 SEE SKETCH)
- DISCONNECT LOWER HYDRAULIC LINE FROM BRAKE LINE PORT AND AN824-4D TEE AND CAP TIGHTLY.
- REMOVE AND DISCARD EXISTING BRAKES.

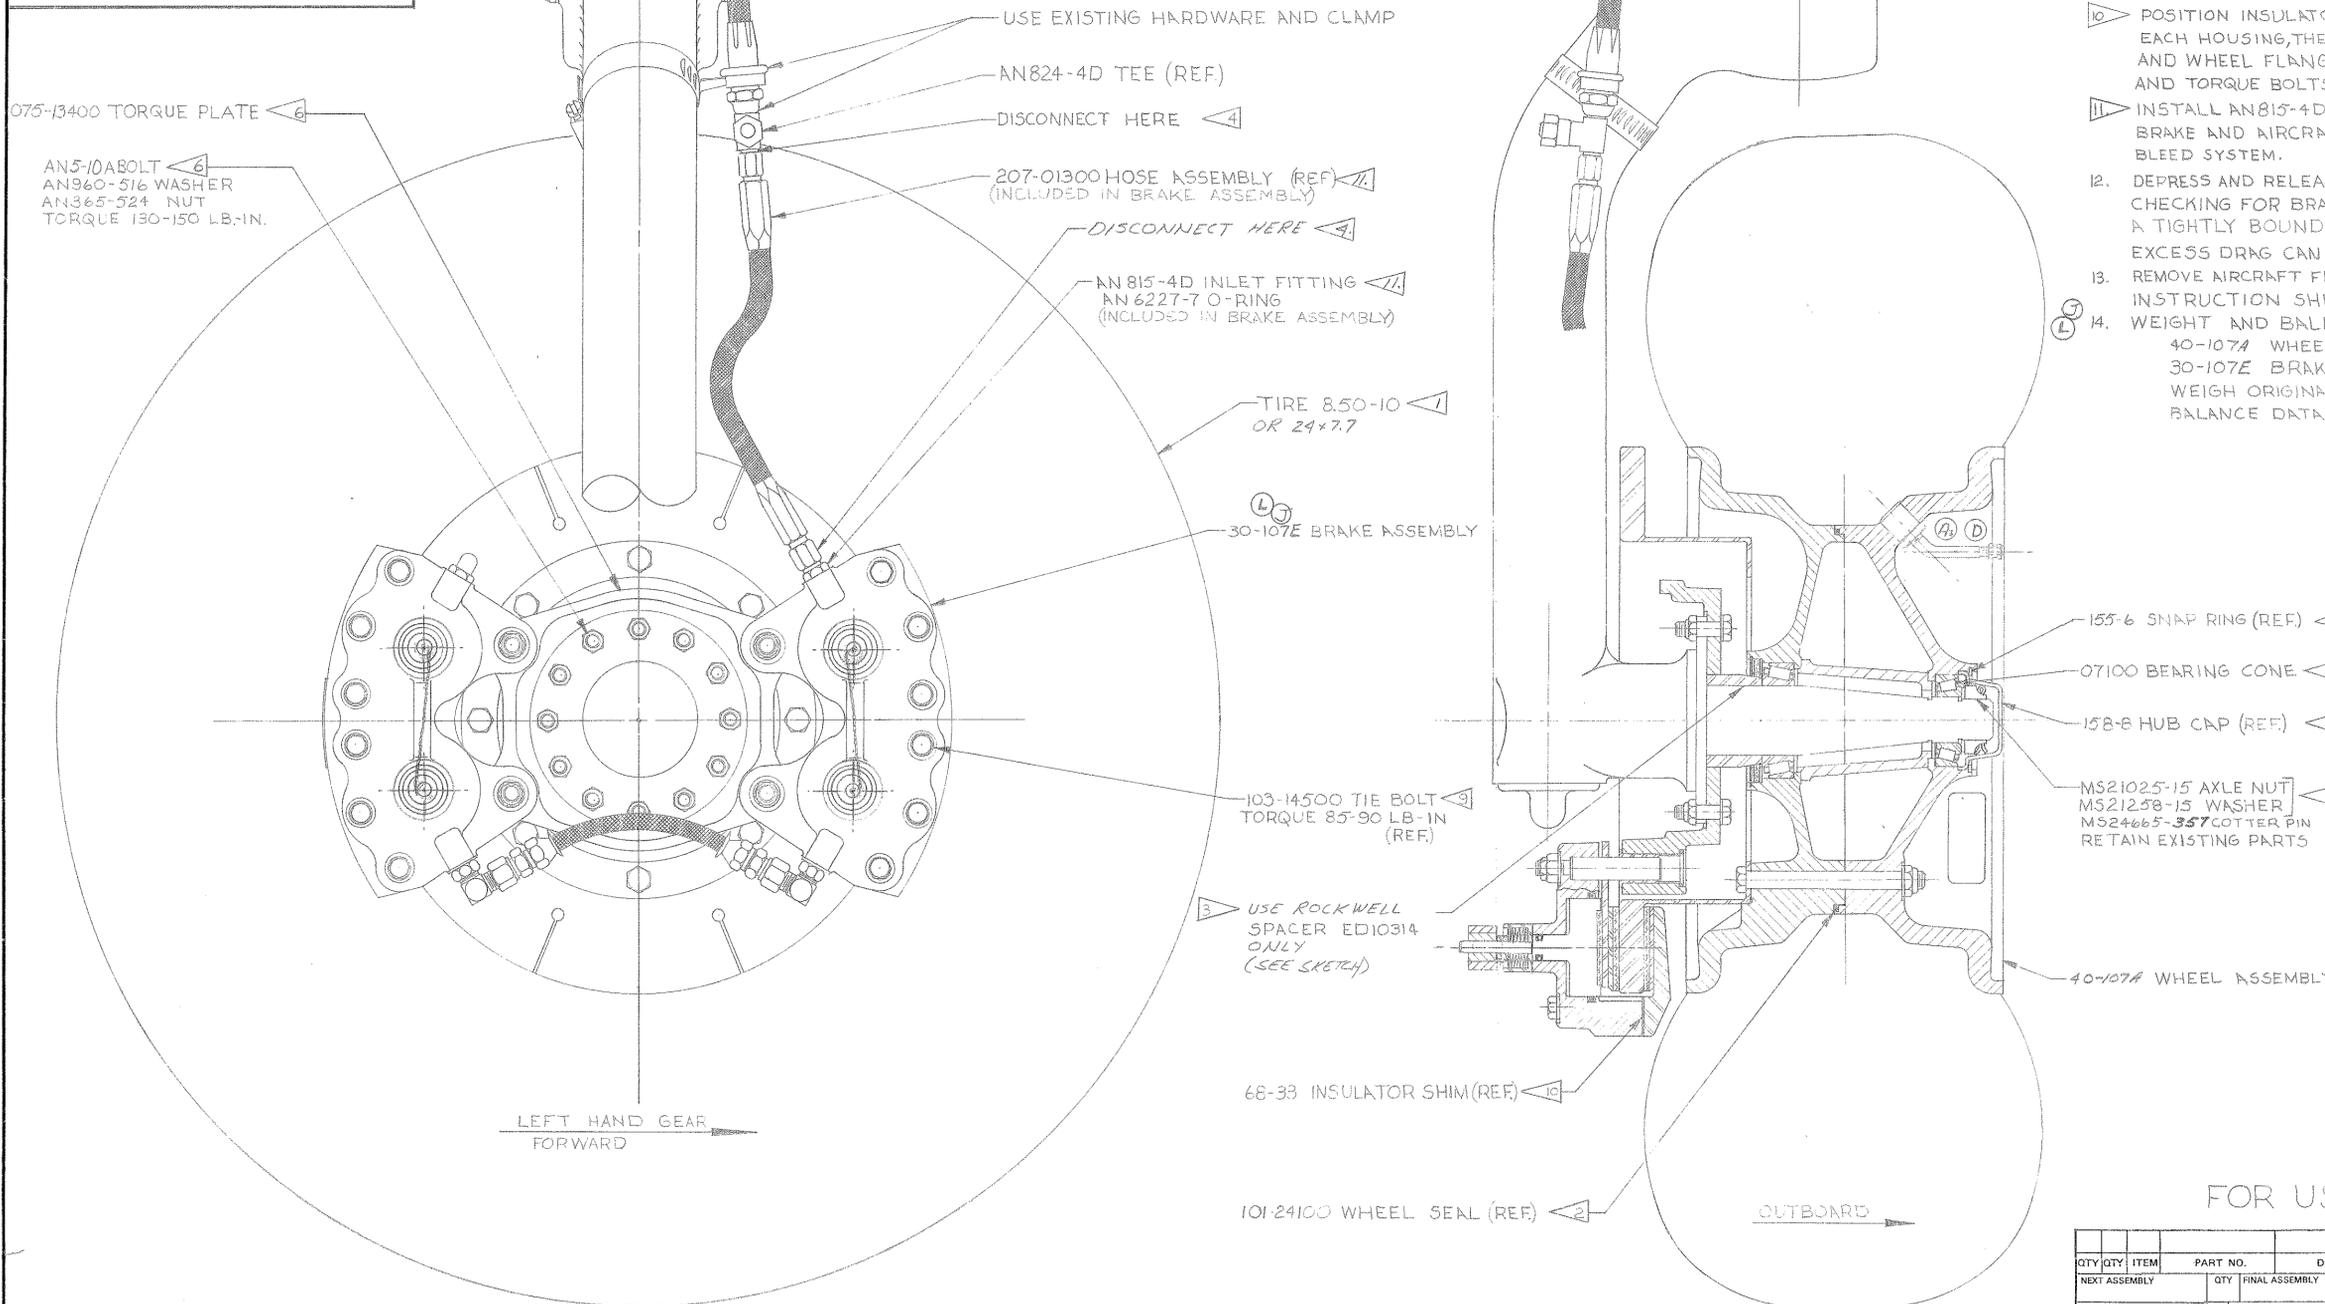

- INSTALL TORQUE PLATE 075-13400, LOCKED AS SHOWN. TORQUE MOUNTING BOLTS 130-150 POUND-INCHES.
- REMOVE 155-6 SNAPRING, 158-8 HUB CAP AND 07100 OUTER BEARING CONE FROM 40-107A WHEEL ASSEMBLY AND STORE ON A CLEAN SURFACE.
- INSTALL WHEEL ASSEMBLY ON AXLE. INSTALL OUTER BEARING CONE, WASHER AND AXLE NUT WHILE ROTATING WHEEL. TORQUE AXLE NUT TO 80 N-LBS. THEN BACK OFF TO 0. WHILE ROTATING WHEEL, RE-TORQUE AXLE NUT TO 30 N-LBS. IF SLOTS IN NUT DO NOT LINE UP WITH HOLE IN AXLE, CONTINUE TIGHTENING UNTIL FIRST AVAILABLE ALIGNMENT IS REACHED, BUT DO NOT ADVANCE IN EXCESS OF 30°. INSTALL MS 24665-357 COTTER PIN. INSTALL HUB CAP IN WHEEL WITH SNAP RING.
- LOOSEN 12 TIE BOLTS ON 30-107E BRAKE ASSEMBLY (BOTH HOUSINGS) AND REMOVE ALL 4 BACK PLATES. SLIDE NEW BRAKE HOUSINGS IN THE 2 MOUNTING HOLES ON EITHER SIDE OF THE TORQUE PLATE. LOCATE HOUSINGS AS SHOWN. DO NOT LOOSEN OR DISCONNECT THE CONNECTING HOSE.
- POSITION INSULATOR SHIM 68-33 OVER THE 6 TIE BOLTS IN EACH HOUSING, THEN POSITION BACK PLATES BETWEEN BRAKE DISC AND WHEEL FLANGE AS SHOWN. ALIGN BACK PLATES WITH BOLTS AND TORQUE BOLTS 85-90 POUND-INCHES.
- INSTALL AN815-4D INLET FITTING AND 207-01300 HOSE ASSEMBLY BETWEEN BRAKE AND AIRCRAFT HYDRAULIC LINE. CHECK RESERVOIR FLUID LEVEL AND BLEED SYSTEM.
- DEPRESS AND RELEASE TOE PEDALS SEVERAL TIMES. ROTATE WHEELS BY HAND, CHECKING FOR BRAKE DRAG. A SLIGHT AMOUNT OF DRAG IS NORMAL. HOWEVER A TIGHTLY BOUND UP SYSTEM SHOULD BE INVESTIGATED AND CORRECTED. EXCESS DRAG CAN BE CAUSED BY AN IMPROPERLY SEATED LINING.
- REMOVE AIRCRAFT FROM JACKS AND CONDITION LINING PER THE ENCLOSED INSTRUCTION SHEET.
- WEIGHT AND BALANCE
  - 40-107A WHEEL ASSEMBLY WEIGHS 24.7 POUNDS
  - 30-107E BRAKE ASSEMBLY WEIGHS 15.3 POUNDS
  - WEIGH ORIGINAL WHEELS AND BRAKES AND REVISE WEIGHT AND BALANCE DATA IN LOG BOOK.

CHANGE NOTICE	LET-TER	DESCRIPTION OF CHANGE	CHG BY	DATE	CHKD BY
463/790	A	1. ADD NOTE 15. 2. ADD MODELS 695A, 690C, 690D, 695, 695A AND 24x7.7 TIRE. 3. REVISE TIRE VALVE.		8-12-79	
264/18	B	1. ADD INFLATION PRESSURES. 2. DELETE MODELS 690D, 695, 695A AND 24x7.7 TIRE. 3. AXLE NUT TORQUE WAS 40/20 LB-IN. 4. DEFINE APPLICABILITY OF NOTE 15. ADD NOTE 16.			
264/71	C	REVISED NOTE # B			
263/65	D	SHOW NEW AIR VALVE			
264/11	E	SEE 7A			
264/11	F	SEE 7A			
264/11	G	SEE 7A			
267/60	H	1. ADDED MODELS 680T, 680Y, 680W, 681			
274/139	J	30-107E WAS 107E (NEW) (SEE 274/139)			
277/134	K	AXLE NUT 695A, 400 LB IN			
034/124	L	30-107E WAS 30-107C			

FOR USE WITH MIL-H-5606 BRAKE FLUID

QTY	QTY	ITEM	PART NO.	DESCRIPTION	MATERIAL & SPEC.	HEAT TREAT & SPEC.	FINISH & SPEC.	WGT.
		NEXT ASSEMBLY		FINAL ASSEMBLY				
				PATTERN, CASTING OR BLANK NO.				
THIS DESIGN IS THE PROPERTY OF CLEVELAND WHEELS & BRAKES AND IS NOT TO BE COPIED, DUPLICATED, OR USED AS THE BASIS FOR MANUFACTURE OR SALE OF EQUIPMENT WITHOUT WRITTEN PERMISSION.				ZYGLO PER MIL-I-6866 STAMP M ON PART MAGNAFLUX PER MIL-I-6888 STAMP P ON PART MACHINED SURFACES PER MIL STD 10 UNLESS OTHERWISE NOTED UNLESS NOTED ALL THREADS PER MILS-742	WORK TO DIMENSIONS - DO NOT SCALE TOLERANCE FOR .XXX ± .010 TOLERANCE FOR ANGULAR DIMS ± 1/2° TOLERANCE FOR FRACTIONAL DIMS ± .002 BREAK SHARP EDGES .010 UNLESS NOTED. REMOVE ALL BURRS BEFORE PLATING. DRILL PER INSP. PROCEDURE NO. 114.	CHECKED BY SCALE NAME	Cleveland Wheels & Brakes 1160 Avon Center Road, Avon, Ohio 44011 a division of VanSickle Industries, Inc. "the brake people"	
INSTALLATION OF KIT 199-80 AERO COMMANDER								50-51



Technical Publication

# **Component Maintenance Manual With Illustrated Parts List**

**MM40-107/30-107**



**Wheel & Brake Assembly**

**Main Wheel Assembly**

Part No. 40-107

Part No. 40-107A

**Main Brake Assembly**

Part No. 30-107

Part No. 30-107A

Part No. 30-107B

Part No. 30-107C

Part No. 30-107D

Part No. 30-107E

---

**Cleveland**  
Wheels & Brakes

---






Technical Publication

# Component Maintenance Manual With Illustrated Parts List

MM40-107/30-107

Wheel & Brake Assembly

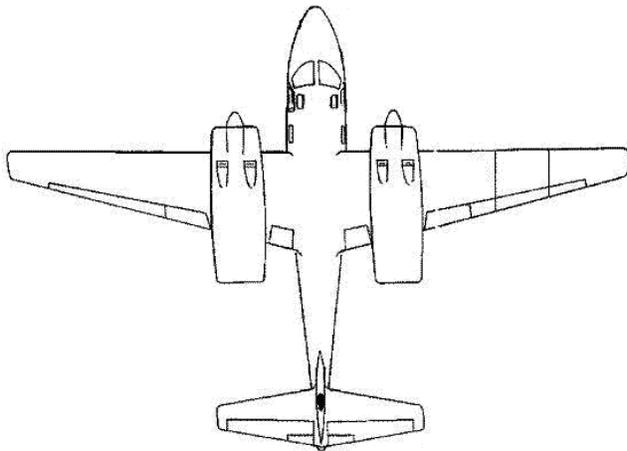

Main Wheel Assembly

Part No. 40-107

Part No. 40-107A

Main Brake Assembly

Part No. 30-107


Part No. 30-107A

Part No. 30-107B

Part No. 30-107C

Part No. 30-107D

Part No. 30-107E

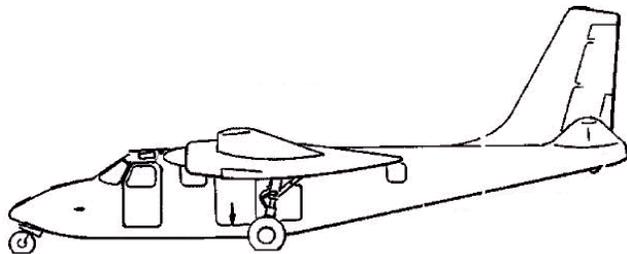

Used On

Rockwell 690, 695, 840, 980 Series

Initial Issue January 23, 1978

---

---

## Cleveland

Wheels & Brakes

**Parker Hannifin Corporation**

Aircraft Wheel & Brake

Avon, Ohio 44011

Cage Code 33269

Page T-1

February 01, 2002





MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
 FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
 MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

**LIST OF REVISIONS**

REV	DATE	PAGE	DESCRIPTION	APPROVAL
A	5-5-82	7.1	B,2) & B,5)...Changed to call out removal and installation of stud assembly from piston instead of bolt from stud. Added "torque stud assembly at 60-70 in-lbs."	B.B.
		7.2	...Added call out of 110-04900 stud assy.	
B	7-29-83	4	5.2.0...Changed to call out removal and installation of center rivet. Delete application of glue to backside of lining.	B.B.
		7.1	..."SERIES" was "/30-107A" ...Added line B,2A) B,5)...Added "(or bolt and spring guide, if used)." Added "(or bolt P/N 103-15300, is used)."	
		7.2	...Added footnote * ...Added footnote **	
C	9/27/84	7.3	...Added Section 7.3, Maintenance Instructions, 30-107C Brake Assembly	B.B.
D	12/10/84	7.3	...Added 30-107D Para. 7.3, 1.: Added "199-13001" and "38". Para. 7.2, 1.< 16): "30-40" was "60-70".	B.B.
E	3/18/87	6	".492" was ".502"	B.B.
F	1/10/89	2	Sec. 3.1.2 Add "...300 in-lb."	B.B.
G	02/01/02	ALL	Add instructions for 30-107E and Update formatting	B.B.





**TABLE OF CONTENTS**

<u>SECTION</u>	<u>PAGE</u>
1. MAIN WHEEL .....	1
1.1 Disassembly .....	1
1.2 Cleaning, Inspection and Repainting .....	1
1.3 Reassembly .....	3
2. MAIN BRAKE .....	3
2.1 Disassembly .....	3
2.2 Cleaning, Inspection and Repainting .....	5
2.3 Reassembly .....	7
3. WEAR LIMITS.....	8
4. AXLE NUT TORQUE REQUIREMENTS & PROCEDURE .....	8
5. SERVICING RETRACT SPRING STACK (30-107, 30-107A, 30-107B).....	9
6. SERVICING RETRACT MECHANISM (30-107C, 30-107D, 30-107E) .....	12
7. ILLUSTRATED PARTS LIST.....	19
8. DETAILED PARTS LIST – MAIN WHEEL (40-107, 40-107A).....	23
9. DETAILED PARTS LIST – MAIN BRAKE (30-107, 30-107A, 30-107B).....	27
10. DETAILED PARTS LIST – MAIN BRAKE (30-107C, 30-107D, 30-107E) .....	31





## **INTRODUCTION**

This manual is published for the guidance of personnel who are responsible for the maintenance functions of the Parker Wheel & Brake Assembly(ies) covered in this publication. The instructions published herein contain the necessary information to perform maintenance checks "on aircraft" as well as complete shop repair of the assemblies.

**NOTE:** For information not specifically covered in this manual, refer to the Component Maintenance Manual, AWBCMM0001, current issue. It is a reference publication generically written to address the common practices and procedures used to inspect, troubleshoot and overhaul most General Aviation external type wheels and brakes.

While Parker Hannifin Corporation represents that information contained in this manual was current at the time of publication of this issue, the user is cautioned to inquire as to whether a more recent revision is in existence before proceeding with maintenance operations. To accomplish this, users can contact Parker directly at the following:

Parker Hannifin Corporation  
Aircraft Wheel and Brake  
1160 Center Road  
Avon, Ohio 44011 U.S.A. Attn: Customer Service  
1-800-272-5464 (Phone)  
(440) 937-5409 (Fax)

## **NOTICE**

The procedures outlined in this manual may be altered if better and/or more economical methods can be employed by the individual facilities. However, the alternate procedures must not lessen the efficiency of operation of the assembly, and all torque and specific limits or values contained herein must be strictly observed. If deviations are questionable, contact Parker Engineering at the above number.





## 1. MAIN WHEEL

Refer to IPL Figure 8 for identification of wheel assembly components.

### 1.1 Disassembly

1.1.1 Properly jack up aircraft and fully deflate tires.

1.1.2 Remove bolts and washers from brake assembly to remove back plates.

1.1.3 Remove wheel from axle.

**CAUTION:** DO NOT USE TIRE IRONS.

1.1.4 Double check to make sure tire is fully deflated and break tire bead from wheel flange. Use a mallet or non-metallic instrument.

1.1.5 Remove nuts (8-15 or 8-15A), washers (8-10 or 8-10A), and bolts (8-5 or 8-5A) to separate wheel halves.

1.1.6 Remove and discard the O-ring (8-20).

1.1.7 Remove brake disc (8-65) from inner wheel half (8-35). If the disc sticks, use a non-metallic instrument and pry it out.

1.1.8 Remove snap rings (8-60, 8-95) grease seal felt (8-55) grease seal rings (8-50) and hubcap (8-90 or 8-90A) from inner and outer wheel halves (8-35, and 8-75 or 8-75A).

### 1.2 Cleaning, Inspection and Repainting

1.2.1 Degrease all metallic parts and dry thoroughly.

1.2.2 Visually inspect bearing cups (8-40, 8-80) and cones (8-45, 8-85) for damage or wear, but do not remove the cups from the wheel half unless replacement is necessary.

- 1.2.3 If a bearing cup is to be replaced, the wheel half must be heated either in boiling water for 30 minutes, or in an oven not to exceed 149°C (300°F) before attempting to remove or install a cup. If the cup does not drop out, tap the cup evenly from the axle bore, using a fiber drift pin, or a suitable arbor press.

**CAUTION:** NEVER EXCEED 500 WHEEL MILES BETWEEN REPACKING INTERVALS.

- 1.2.4 Inspect bearing cones for grease contamination and/or solidification at every periodic inspection. Repack wheel bearings with Aeroshell grease 22, conforming to MIL-G-81322.

**CAUTION:** NEVER PAINT WORKING SURFACES OF THE BEARING CUPS.

- 1.2.5 Inspect wheel halves for cracks or damage. If casting is cracked, or shows excessive corrosion, it should be replaced. Small nicks or gouges in the castings should be blended out and polished with (400 grit) sandpaper. Inspect O-ring (8-20) seating areas for nicks or distortion. Nicks may be lightly blended with a fine grit sandpaper. badly distorted sections in this area will hamper O-ring sealing Characteristics, and is cause for wheel half replacement. Areas from which the protective coating has been removed, or that show slight corrosion, should be thoroughly cleaned and repainted with one coat of zinc chromate primer, and one coat of aluminum (color) polyurethane.
- 1.2.6 Inspect snap rings and grease seal rings for distortion. Replace grease seal felts if badly worn or contaminated. Lightly saturate new or reused grease seal felts with SAE 10 oil before installation (DO NOT SOAK).
- 1.2.7 Inspect brake disc (8-65) for cracks, corrosion, excessive wear, scoring or warpage. Rust may be removed by hand wire brushing and finishing with a medium grit sandpaper or emery.
- 1.2.8 Inspect wheel bolts for cracks and corrosion. Cracked bolts are to be replaced with a new bolt of corresponding part number. Inspect metallic self-locking nuts. If the nut can be turned onto the bolt by hand, so that the bolt will protrude past the end of the nut, it is to be replaced.

### 1.3 Reassembly

- 1.3.1 Place inner wheel half (8-35) with brake disc (8-65) and bolts (8-5 or 8-5A) installed on a flat surface, with register portion of the wheel half up. Place new O-ring (8-20) on register portion of wheel half. Place tire over inner wheel half, and then place outer wheel half in tire, making sure to properly align male and female registers. Install nuts (8-15 or 8-15A) and washers (8-10 or 8-10A). Torque nuts to limits listed on decal affixed to outer wheel half. When all nuts have been torqued, torque a second time to make sure that the required value has been achieved; sometimes O-ring compression will give false initial readings. Inflate tire to desired pressure.
- 1.3.2 To complete wheel re-assembly, reverse steps 1.1.2 through 1.1.7 and torque wheel nuts (8-15 or 8-15A) per limits listed on decal affixed to outer wheel half (8-75 or 8-75A): 300 in-lb.

## 2. MAIN BRAKE

Refer to IPL Figure 9 and Figure 10 for identification of brake assembly components.

**NOTE:** It is not necessary to remove the wheel from the aircraft to disassemble and service brake.

### 2.1 Disassembly

- 2.1.1 Remove and cap hydraulic line.
- 2.1.2 Remove the cylinder bolts (9-5 or 10-5) and remove back plate assemblies (9-85 or 10-85).
- 2.1.3 Remove the brake cylinder assemblies (9-15, -15A, -15B or 10-15, -15A, -15B, -15C) from the torque plate (the torque plate will remain mounted to the axle).
- 2.1.4 Remove the pressure plate assembly (9-60 or 10-60), inlet fitting (9-175 or 10-215), and bleeder fitting (9-155 or 10-195).

**NOTE:** It will be necessary to remove the retracts prior to piston removal.

- 2.1.5 Refer to section 5. and 6. for removal of the retracts prior to removing the pistons.


**CAUTION:** MARK EACH PISTON AND BORE TO ENABLE CORRECT REASSEMBLY.

2.1.6 The pistons (9-40 or 10-40) may be removed by threading one of the back plate attachment bolts (9-5 or 10-5) into each piston in succession, and with hand pressure, push each piston out of the brake cylinder.

2.1.7 Remove the O-rings (9-55, -55A or 10-55, -55A) from cylinder.

2.1.8 If necessary, the anchor bolts (9-100 or 10-100) may be removed by using a holding fixture and arbor press. Place the anchor bolts into the holding fixture so that the anchor bolt is piloted while being removed.

**CAUTION:** CYLINDER MUST BE SQUARE WITH ARBOR IN STEPS "A" AND "B" SO THAT THE ANCHOR BOLTS DO NOT COCK.

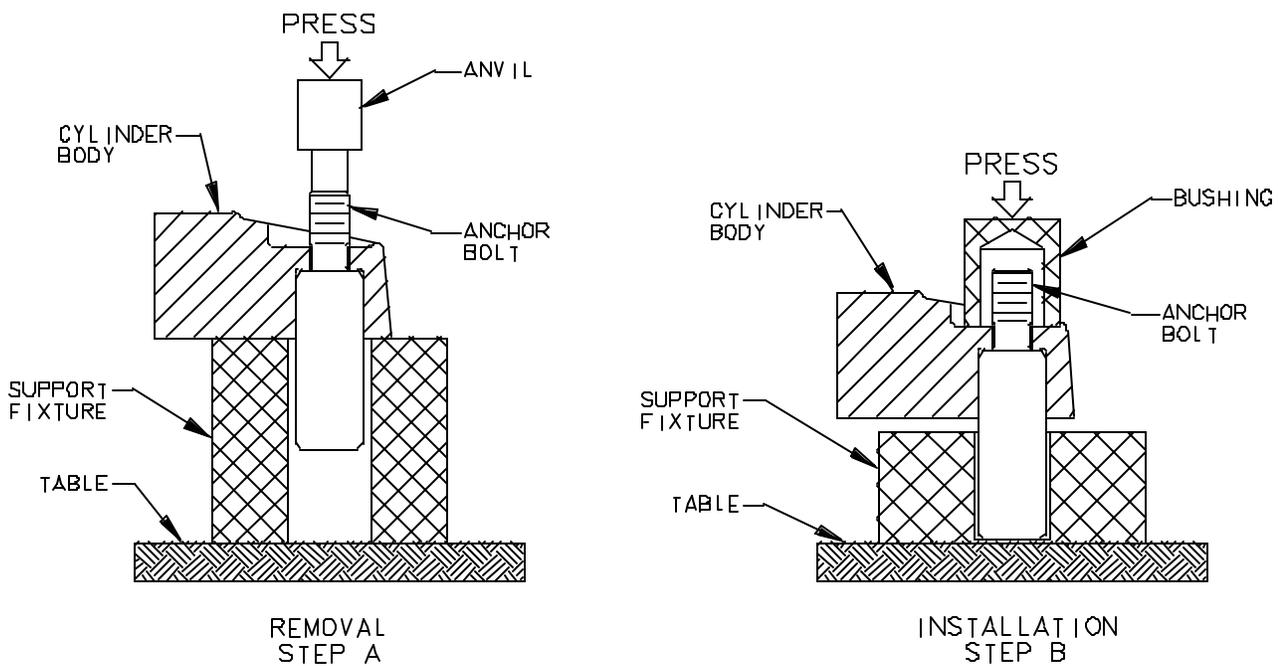

Anchor Bolt Removal and Installation  
 Figure 1

## 2.2 Cleaning, Inspection and Repainting

2.2.1 Clean all metal parts in alcohol or suitable solvent.

2.2.2 Replace O-rings.

2.2.3 Inspect brake cylinder (9-20 or 10-20) for cracks, especially in the lug area around the anchor bolts. Cracks in this area necessitate cylinder replacement.

**CAUTION:** THE LARGE DIAMETER PISTON BORE AND O-RING GROOVE **SHOULD NOT** BE POLISHED WITH ABRASIVE MATERIAL.

**CAUTION:** NICKS AND BURRS IN THE PILOT BORE AREA CAN PREVENT THE PISTONS FROM PROPERLY RETRACTING, RESULTING IN BRAKE DRAG.

2.2.3.1 Piston bores and O-ring grooves should have foreign material loosened and flushed from all surfaces.

2.2.3.2 Small nicks and light corrosion may be blended and removed with emery or sandpaper.

2.2.3.3 Inspect the fitting ports and piston bores for contamination. Light scratches or nicks in the piston bores, pilot bores, or on the chamfered surfaces within these bores may be polished out with 600 grit emery, but the final piston bore small diameter shall not exceed  $\varnothing 0.565$ .

**CAUTION:** DO NOT PAINT INTERNAL SURFACES OF PISTON BORES.

2.2.3.4 Thoroughly clean cylinder of all residue upon completion of any reworking with available solvent applicable to aluminum. Any external surfaces from which the protective coating has been removed, should be cleaned, and painted with one coat of zinc chromate primer and one coat of aluminum (color) polyurethane.

**CAUTION:** DO NOT PAINT INTERNAL SURFACES OF PISTON BORES.

2.2.4 Inspect pistons (9-40 or 10-40) for nicks or burrs. Remove nicks or burrs by polishing with 600 grit emery. The final piston large diameter must not be smaller than  $\text{Ø}2.121$  inch. Thoroughly clean using available solvent applicable to aluminum before re-installation.

2.2.5 Inspect brake lining for edge chipping and surface deterioration. See section 3. **WEAR LIMITS.**

2.2.6 Lining replacement can be accomplished by using a center punch to remove the center rivet. Then pry the old segments off of the carrier with a screwdriver. To install new pads, snap the new pad onto the three carrier pins (9-80 or 10-80), and then attach with new center rivet (9-75 or 10-75).

**NOTE:** If the linings are changed, but the pistons are not removed from the cylinder, clean the exposed surfaces of the pistons before displacing the pistons back into the cylinder.

2.2.7 Inspect pressure plate (9-65, 10-65) and back plates (9-90, 10-90) for cracks or warpage. Replace if cracked or severely deformed. Inspect pins for looseness. If loose, tighten with Parker Hannifin Wheel & Brake rivet set and anvil, P/N 199-1A and 199-1B, or replace back plate and pressure plate assembly.

**NOTE:** Slightly warped pressure plates with relief slots can be fixtured in a vise and straightened when laid on a flat surface; flatness should be less than .015 inches TIR. Warped pressure plates can cause brake drag.

2.2.8 Inspect anchor bolt holes in torque plate for internal corrosion or contamination. If present, clean with emery and apply a light coat of dry lube.

**NOTE:** For best service life, the cylinders must slide freely in the torque plate.

Check the anchor bolt hole and mounting bolt hole areas for elongation or cracks. Badly elongated or cracked parts should be replaced with new parts or corresponding part number. Minor corrosion on the torque plates may be removed with 600 grit emery.

**NOTE:** Surfaces from which the protective coating is removed, should be painted with one coat of zinc chromate primer, and one coat of aluminum (color) polyurethane.

2.2.9 Inspect bolts for cracks, thread damage or corrosion, and replace, if necessary.

### 2.3 Reassembly

2.3.1 If removed, press anchor bolts (9-100 or 10-100) (see Figure 1) into brake and install washers (9-30, -30A or 10-30) and nuts (9-25 or 10-25). Torque nuts to 90 in-lbs.

2.3.2 Install inlet and bleeder fittings.

2.3.3 Lay the cylinder on a firm surface.

2.3.4 For piston installation, lubricate the piston, O-ring, and piston bore with a small amount of MIL-H-5606 hydraulic fluid. Place piston in bore and rotate to seat drag ring and insure that piston and seal are in proper alignment.

2.3.5 Install O-rings into cylinder O-ring grooves.

2.3.6 Insert the pistons until the O-rings (9-55, -55A or 10-55, -55A) prohibit further insertion. While applying pressure with your thumbs, rotate the piston in a clockwise direction. After O-ring squeeze is overcome, the piston will slide freely into the bore. Push piston flush to cylinder face.

**NOTE:** If considerable effort is required, remove piston and inspect bore and pilot bore area for damage. If the bore is damaged, check the corresponding area of the piston for damage. Repair, if necessary, and repeat the above procedure.

2.3.7 Install pressure plate assembly by aligning anchor bolt holes with anchor bolts and slide onto cylinder. The pressure plate must float freely on the anchor bolts.


2.3.8 Install brake assembly to torque plate by aligning anchor bolts with torque plate holes and sliding brake assembly onto torque plate (it must slide freely).

2.3.9 Install washers, cylinder tie-bolts, and insulator shim. Install back plate assemblies between brake disc and wheel flange, and align with tie-bolts. Torque bolts to 85-90 in-lbs.

2.3.10 Reconnect hydraulic lines and bleed system. Check pedal for proper feel and travel.

### 3. WEAR LIMITS

3.1 Maximum wear limits for brake linings and discs are shown in the following figure. Disc warpage should not exceed .060 inch.

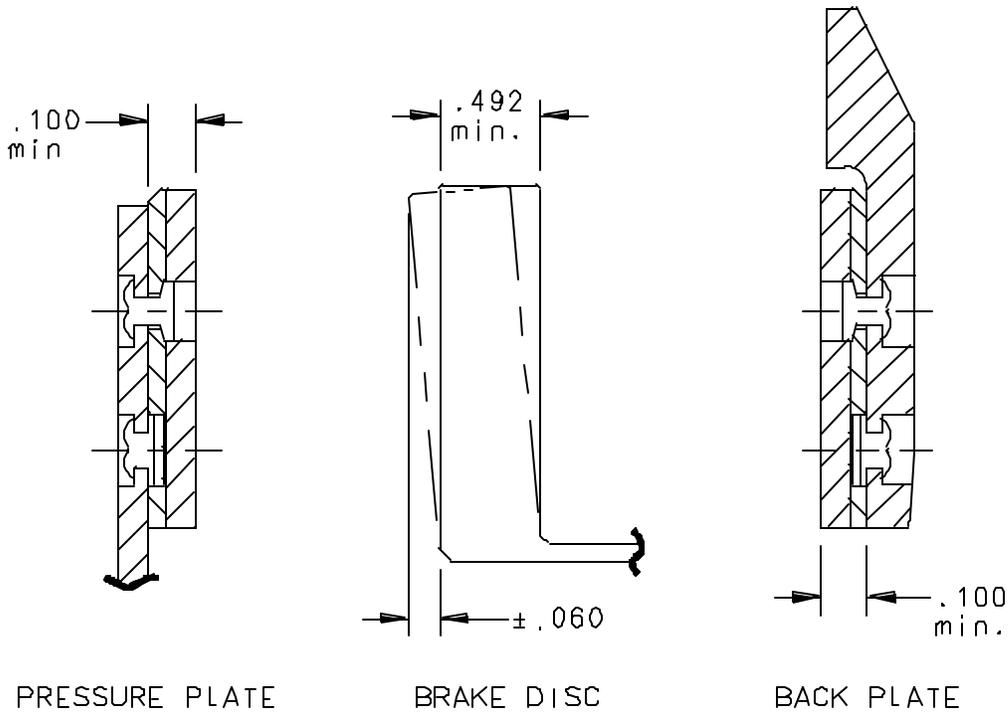

Wear Limits  
 Figure 2

### 4. AXLE NUT TORQUE REQUIREMENTS & PROCEDURE

4.1 While rotating wheel, torque axle nut to 60 in-lbs., then back off to 0 in-lbs. While rotating wheel, re-torque axle nut to 30 in-lbs. If slot in nut does not align with hole in axle, continue tightening until first available alignment is reached but do not advance nut in excess of  $30^\circ$  (1/2 castellation).

## 5. **SERVICING RETRACT SPRING STACK (30-107, 30-107A, 30-107B)**

Refer to IPL Figure 9 for identification of brake assembly components.

With the exception of piston removal, corrosion or damage caused by external (foreign objects), the spring stacks should not require service and/or replacement.

If removal is required, caution must be taken and eye protection worn to avoid injury since we are dealing with a preloaded spring stack.

- 5.1 Apply a slight amount of pressure to the brake system to prevent piston rotation.
- 5.2 For brake assemblies equipped with stud assembly (9-125):


**WARNING: USE EXTREME CAUTION WHEN REMOVING THE STUD ASSEMBLY (9-125). THE DISC SPRINGS (9-120) ARE UNDER LOAD.**

- 5.2.1 Loosen and slowly remove the stud assembly (9-125) from each piston.
- 5.2.2 Slide the disc springs (9-120) from each stud assembly. At this point, check to see if the bolt (9-140) in the stud assembly has loosened. If so, re-tighten the bolt into the stud at 80-90 in-lbs.
- 5.2.3 Inspect the springs (9-120) for nicks or other damage caused by stones or other foreign objects. Damage of this nature is cause for replacement.
- 5.2.4 Inspect parts for corrosion. Lightly corroded parts may be polished with a fine grit emery and coated with a light film of oil or lubricant. Parts that are deeply corroded and/or pitted must be replaced.
- 5.2.5 Refer to Figure 3. After inspection, slide disc springs (9-120) onto the stud (9-130). Re-attach to each piston as shown in Figure 3. Torque stud assembly (9-125) at 60-70 in-lbs.
- 5.2.5 Actuate brake 2-3 times and visually inspect each assembly to insure that everything appears normal and seat properly.

- 5.3 For brake assemblies equipped with retract spring guide (9-115), washer (9-110), washer (9-10A [30-107 and 30-107A only]) and bolt (9-105 or 9-105A):

**WARNING: USE EXTREME CAUTION WHEN REMOVING THE BOLT (9-105 OR 9-105A). THE DISC SPRINGS (9-120) ARE UNDER LOAD.**

- 5.3.1 Loosen and slowly remove the bolt (9-105 or 9-105) and spring stack from each piston, and slide the disc springs (9-120) from each spring guide (9-115).
- 5.3.2 Inspect the springs (9-120) for nicks or other damage caused by stones or other foreign objects. Damage of this nature is cause for replacement.
- 5.3.3 Inspect parts for corrosion. Lightly corroded parts may be polished with a fine grit emery and coated with a light film of oil or lubricant. Parts that are deeply corroded and/or pitted must be replaced.
- 5.3.4 Refer to Figure 3. After inspection, slide disc springs (9-120) onto the bolt (9-105 or 9-105A) and spring guide (9-115). Re-attach to each piston as shown in Figure 3. Torque bolt (9-105 or 9-105A), at 60-70 in-lbs.
- 5.3.5 Actuate brake 2-3 times and visually inspect each assembly to insure that everything appears normal and seat properly.

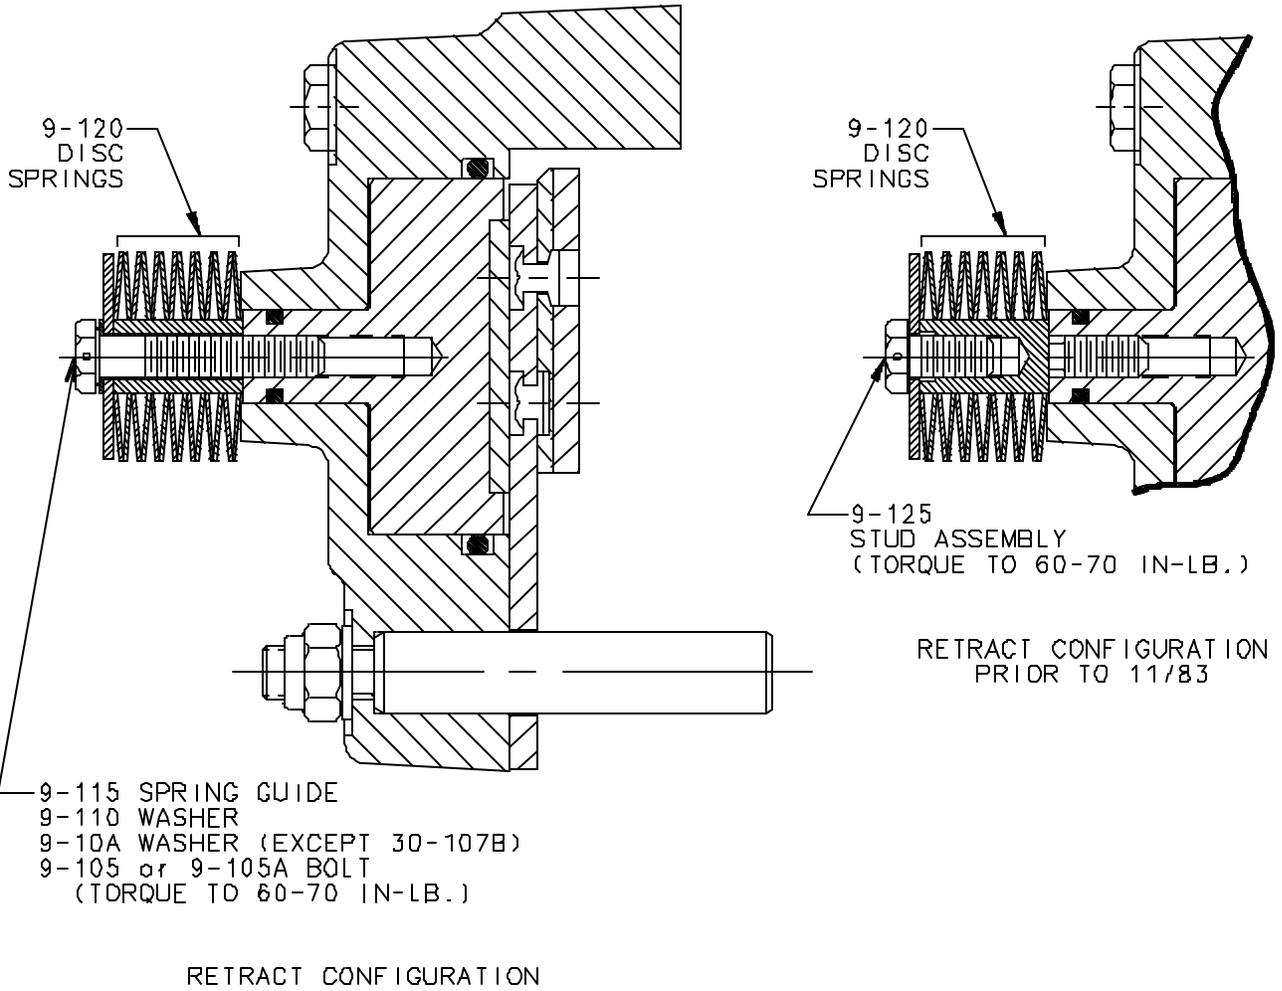

30-107 / 30-107A / 30-107B  
Figure 3

## 6. SERVICING RETRACT MECHANISM (30-107C, 30-107D, 30-107E)

Refer to IPL Figure 10 for identification of brake assembly components.

With the exception of piston removal, corrosion or damage caused by external (foreign objects), the retract mechanisms should not require service and/or replacement.


If removal is required, caution must be taken and eye protection worn to avoid injury since we are dealing with a preloaded spring stack.

- 6.1 Apply a slight amount of pressure to the brake system to prevent piston rotation.
- 6.2 Remove safety wire (10-160) from retract mechanisms.
- 6.3 Remove retract mechanisms.
  - 6.3.1 For Brake Assemblies equipped with retract stud assembly (10-135):
    - 6.3.1.1 Using a suitable wrench (3/8 inch [0.375]), loosen and remove the retract mechanisms (10-135).
    - 6.3.1.2 Remove spacer (10-130).
    - 6.3.1.3 Inspect parts for corrosion. Lightly corroded parts may be polished with a fine grit emery and coated with a light film of oil or lubricant. Parts that are deeply corroded and/or pitted must be replaced.
  - 6.3.2 For Brake Assemblies equipped with retract stud assembly (10-165):
    - 6.3.2.1 Using a suitable allen wrench (5/32 inch [0.156]), loosen and remove the retract mechanisms (10-135).
    - 6.3.2.2 Inspect parts for corrosion. Lightly corroded parts may be polished with a fine grit emery and coated with a light film of oil or lubricant. Parts that are deeply corroded and/or pitted must be replaced.

- 6.4 Remove retract cup assembly (10-105) and disassemble in accordance with the following procedures:

**WARNING: USE EXTREME CAUTION WHEN REMOVING THE SNAP RING (10-125). THE DISC SPRINGS (10-115) ARE UNDER LOAD.**

- 6.4.1 Using an arbor press, apply and maintain a compression load to washer (10-120) and remove snap ring (10-125).
- 6.4.2 Slide the washer (10-120) and disc springs (10-115) from the retract cup (10-110).
- 6.4.3 Inspect the springs (10-115) for nicks or other damage caused by stones or other foreign objects. Damage of this nature is cause for replacement.
- 6.4.4 Inspect parts for corrosion. Lightly corroded parts may be polished with a fine grit emery and coated with a light film of oil or lubricant. Replace parts that are deeply corroded and/or pitted.
- 6.4.5 Reassemble per Figure 4.

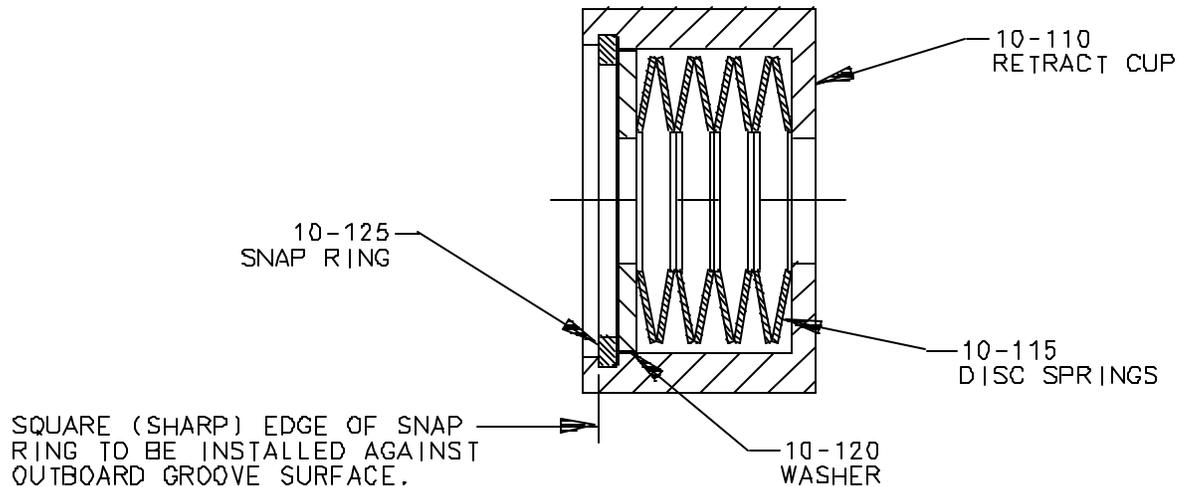

Retract Cup Assembly  
Figure 4

6.5 Install retract mechanisms.

- 6.5.1 Prior to installation, the position of the friction sleeves (10-145, 10-150) on retract stud assembly (10-135) or friction ring and collar spring retainer (10-175, 10-180) on retract stud assembly (10-165) must be reset in accordance with the following procedures.

**NOTE:** Laboratory tests show that this reset procedure may be accomplished 8 times without degradation of the components function. It is recommended that after 8 reset procedures, that the entire retract mechanism be discarded and replaced. If there is suspicion that the unit is worn prior to accomplishing 8 reset procedures, the retract stud assembly (10-135 or 10-165) must be checked in accordance with the following procedure:

- 6.5.1.1 Use a spring tester. Set the friction sleeve on a suitable fixture having a hole through which the stud (10-140) or pin (10-170) can pass and apply a load of 215 lbs. to either end of the stud or pin. If the stud slips, prior to withstanding a load of 215 lbs., replacement if necessary.

- 6.5.2 Resetting and installing retracts for Brake Assemblies equipped with retract stud assembly (10-135): (See Figure 5)

- 6.5.2.1 Using a suitable bench press, reset the friction sleeves (10-145, 10-150) position on the retract stud (10-140) to attain a dimension of 0.690 inch.

- 6.5.2.2 Verify bolt (10-155) torque of 50 to 60 in-lb.

**NOTE:** Torquing may require a slight amount of thumb pressure be applied to the piston face to prohibit piston rotation.

- 6.5.2.3 After setting the retract mechanism, screw one each into the back of each piston and tighten with suitable 3/8 inch [0.375] wrench or socket. Final torque stud assembly (10-135) 30 to 40 in-lb.

- 6.5.2.4 Install brakes on aircraft. Apply and release parking brake. Push cylinder inboard to its full extent. Check retract stud torque to verify adjuster pin has fully engaged the piston. Inboard force on cylinder may be required to prohibit piston rotation.

- 6.5.2.5 Safety wire as required.

- 6.5.2.6 Return aircraft to service.

6.5.3 Resetting and installing retracts for Brake Assemblies equipped with retract stud assembly (10-165): (See Figure 6)

6.5.3.1 Using a suitable bench press, reset the friction ring and collar spring retainer (10-175, 10-180) position on the friction pin (10-170) to attain a dimension of 0.400 inch.


**NOTE:** Torquing may require a slight amount of thumb pressure be applied to the piston face to prohibit piston rotation.

6.5.3.2 After setting the retract mechanism, screw one each into the back of each piston and tighten with suitable 5/32 inch [0.156] allen wrench. Final torque pin (10-170) 50 to 60 in-lb.


6.5.3.3 Install brakes on aircraft. Apply and release parking brake. Push cylinder inboard to its full extent. Check retract stud torque to verify adjuster pin has fully engaged the piston. Inboard force on cylinder may be required to prohibit piston rotation.

6.5.3.4 Safety wire as required.

6.5.3.5 Return aircraft to service.

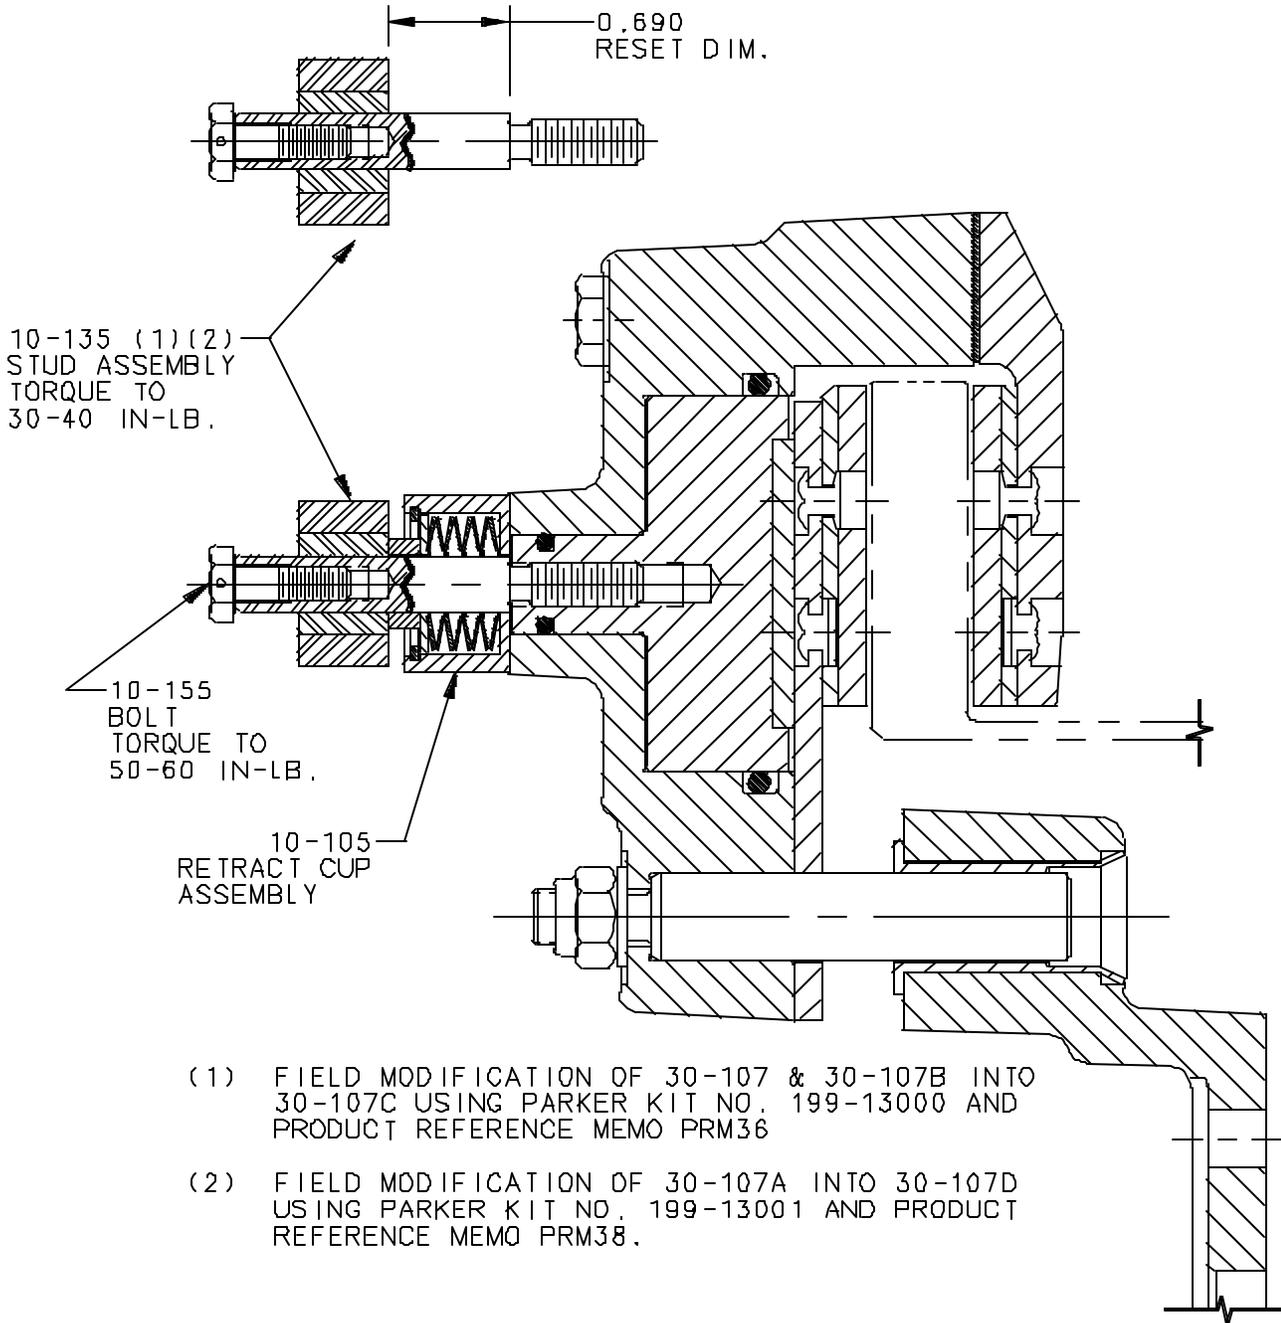

30-107C / 30-107D  
 Figure 5

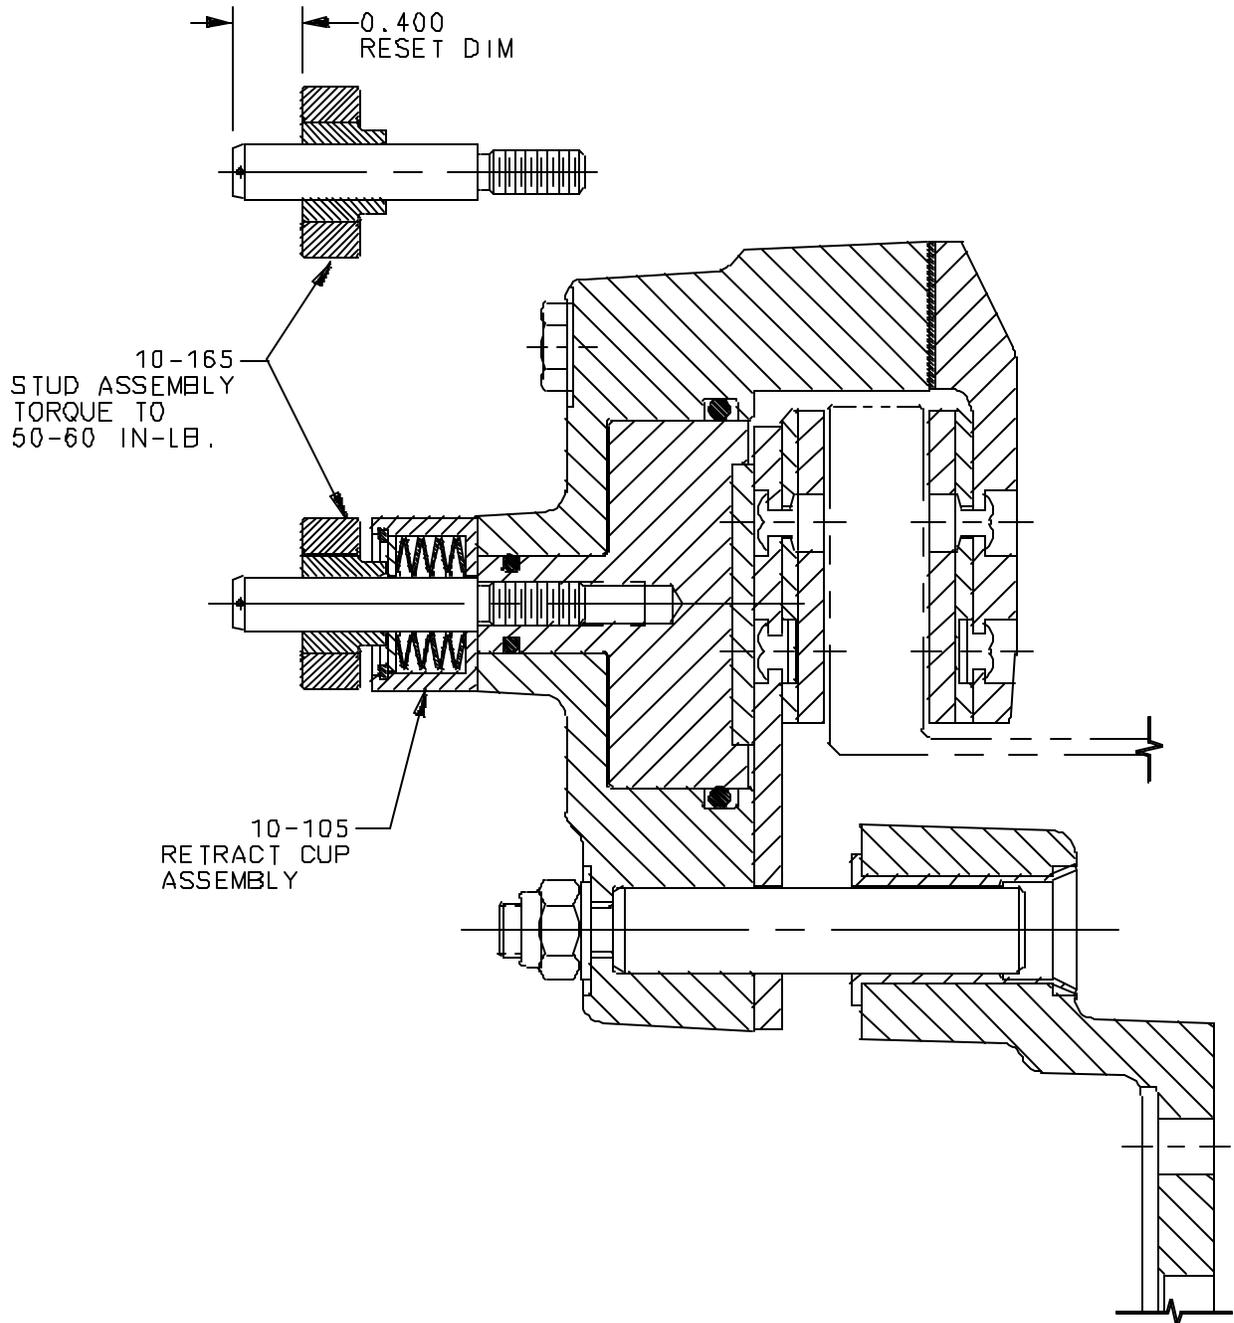

30-107E  
Figure 6

6.6 Wear limit indicator (30-107C, 30-107D, 30-107E)

The retract mechanism may be used as a visual indicator relative to brake lining pad (10-70) and brake disc (8-65) wear.

6.6.1 For brake assemblies equipped with retract stud assembly (10-135): Refer to Figure 7A.

6.6.1.1 When the bottom surface on the head of the retract stud bolt (10-155) comes within 0.025 inches of the friction sleeves (10-145, 10-150), inspection/replacement of the brake linings (10-70) and brake disc (8-65) is required. Refer to section 3. **WEAR LIMITS.**

6.6.2 For brake assemblies equipped with retract stud assembly (10-165): Refer to Figure 7B.

6.6.2.1 When the top of the friction pin (10-170) comes within 0.031 inches of the collar spring retainer/friction ring (10-180/10-175), inspection/replacement of the brake linings (10-70) and brake disc (8-65) is required. Refer to section 3. **WEAR LIMITS.**

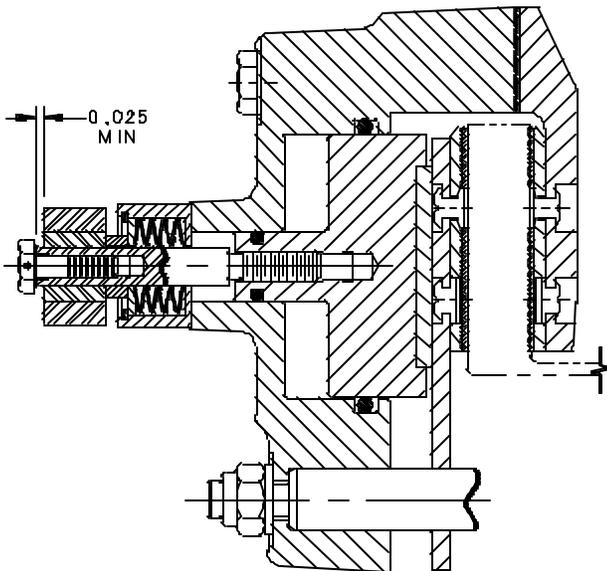


FIGURE 7A  
 BRAKE ASSEMBLIES EQUIPPED WITH  
 (IPL 10-135) RETRACT STUD ASSEMBLY

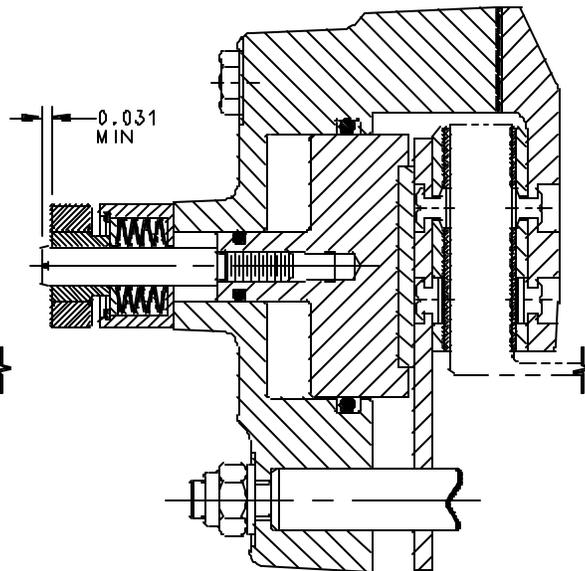


FIGURE 7B  
 BRAKE ASSEMBLIES EQUIPPED WITH  
 (IPL 10-165) RETRACT STUD ASSEMBLY

Wear Limit Indicator  
 Figures 7A and 7B



## 7. ILLUSTRATED PARTS LIST

The illustrated parts list describes and illustrates the detail parts of the assembly.

All parts of the equipment are listed, except parts which lose their identities by being permanently fastened to other parts of assemblies and are not subject to disassembly.

### 7.1 Explanation of Columns

- 7.1.1 Figure/Item column: The figure and item numbers key the parts breakdown list to the applicable illustration. The first number represents the figure number of the illustration. The item numbers are arranged in sequence and generally reflect the order of disassembly.
- 7.1.2 Part Number column: This column contains the assigned Parker Hannifin Aircraft Wheel and Brake part number for the individual item.
- 7.1.3 Nomenclature column: This column identifies the parts being listed by noun name followed by modifiers when applicable. The indenture system used in the parts list shows the relationship of the parts to their subassemblies and to the assembly:
- 1 2 3 4
  - Assembly
  - Attaching Parts for Assembly
    - Detailed Parts for Assembly
    - Subassembly
    - Attaching Parts for Subassembly
    - Detailed Parts for Subassembly
- 7.1.4 Effect column: Shows the difference in parts within various configurations of the units or assemblies. These units or assemblies shall be assigned reference letters such as A, B, C, D, etc. Parts which are not common to all configurations, but are associated with one or more of the coded lead items, shall carry the letter or letters assigned to the lead item with which it is associated. If a part is common to all lead items, the Effect Code column shall be blank
- 7.1.5 Units Per Assembly column: This column indicates the total number required per assembly or per subassembly as applicable. These abbreviations may appear in the Units Per Assembly column:
- AR .....As Required (for bulk items)
  - NP .....Item is Nonprocurable (listed for reference only)
  - RF .....Reference (item listed for reference only)



## 7.2 Part Numbering System

Parker Hannifin Aircraft Wheel & Brake has assigned a part number to all purchased and government standard off-the-shelf parts. They are defined and used as follows:

When a purchased part is listed, the assigned Parker Hannifin AWB part number shall be used in the part number column. If required by contract or if the original manufacturer of a purchased part has FAA manufacturing approval then; the original manufacturer's part number along with the manufacturer's federal supply code will be shown in parentheses following the part nomenclature. The federal supply code will be preceded by the letter "V".

Unless otherwise specified by contract, all government standard off-the-shelf parts (such as MS, AN, NAS, etc.) will be identified by the assigned Parker Hannifin AWB part number which will be used in the part number column.

## 7.3 Parts Replacement Data

The interchangeability relationship between parts is identified in the Nomenclature column of the parts list. A list of the terms used to show interchangeability and their definition is as follows:

<u>Term</u>	<u>Abbreviation</u>	<u>Definition</u>
Optional	OPT	This part is optional to and interchangeable with other parts in the same item number variant group or other item number if designated.
Superseded By	SUPSD BY	The part in the part number column is replaced by and is not interchangeable with the item number shown in the notation.
Supersedes	SUPSDS	The part in the part number column replaces and is not interchangeable with the item number shown in the notation.
Replaced by By	REPLD BY	The part in the part number column is replaced by and interchangeable with the item number shown in the notation.
Replaces	REPLS	The part in the part number column replaces and is interchangeable with the item number shown in the notation.
Vendor	V	Federal Supply Code for vendors.



#### 7.4 Items Not Illustrated


Items not illustrated are indicated by a dash (-) ahead of the item number in the Figure/Item number column.

#### 7.5 Alpha Variant Item Numbers

Alpha variants A through Z (except I and O) are assigned to existing numbers when necessary to show:

- (1) Added items
- (2) Modification or configuration differences
- (3) Optional parts

Alpha variant item numbers are not shown on the exploded view when the appearance and location of the alpha variant item is the same as the basic item.

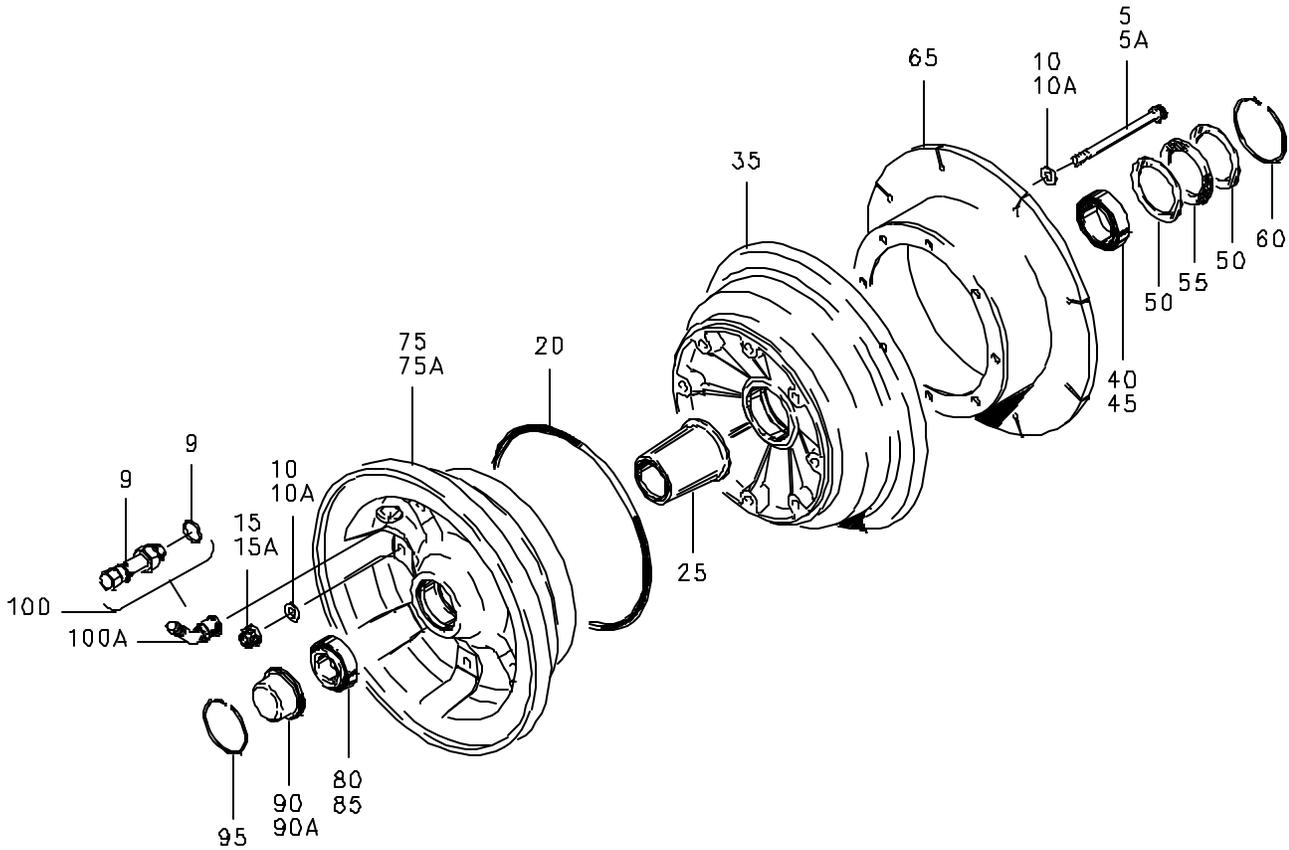

Main Wheel Assembly  
40-107 / 40-107A  
IPL Figure 8



MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
 FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
 MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

**8. DETAILED PARTS LIST – MAIN WHEEL (40-107, 40-107A)**

FIG. ITEM	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFFECT CODE	UNITS PER ASSY.
8 -1	40-107 (1)	MAIN WHEEL ASSEMBLY (SUPSD BY 40-107A)	A	RF
8 -1A	40-107A (1)	MAIN WHEEL ASSEMBLY (SUPSDS 40-107)	B	RF
		WHEEL ATTACHING PARTS		
5	103-31000	BOLT (AN6-40A)	A	8
5A	103-32500	BOLT (MS21250-06056)	B	8
10	095-10600	WASHER (AN960-616)	A	16
10A	095-03100	WASHER (MS20002C6)	B	16
15	094-10400	NUT (MS21044-N5)	A	8
15A	094-15800	NUT (NAS1804-6N))	B	8
		* * *		
20	101-24100	. O-RING		1
25	067-04100	. SPACER		1
- 30	161-07600	. ASSEMBLY, WHEEL HALF, INBOARD		1
35	151-07200	. . WHEEL HALF, INBOARD		1
40	214-01300	. . CUP, BEARING		1
45	214-01400	. CONE, BEARING, INBOARD		1
50	153-01600	. RING, GREASE SEAL		2
55	154-01600	. FELT, GREASE SEAL		1
60	155-00100	. RING, SNAP, INBOARD		1
65	164-07200	. DISC		1
- Item Not Illustrated				
(1) Wheel qualified for usage with the following tires: 8.50-10, 10 ply; tubeless. 24 x 7.7, 16 ply, tubeless (90 PSI max. inflation).				



MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES


---

**THIS PAGE  
INTENTIONALLY  
LEFT BLANK**



MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
 FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
 MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

FIG. ITEM	PART NUMBER	NOMENCLATURE							EFFECT CODE	UNITS PER ASSY.
		1	2	3	4	5	6	7		
- 70	162-07100	.							A	1
- 70A	162-09100	.							B	1
75	152-07100	.	.						A	1
75A	152-09400	.	.						B	1
80	214-03400	.	.							1
85	214-01000	.								1
90	158-00800	.							A	1
90A	158-01900	.							B	1
95	155-00600	.								1
100	160-00900	.							A	1
100A	160-01100	.	.						B	1
- Item Not Illustrated										

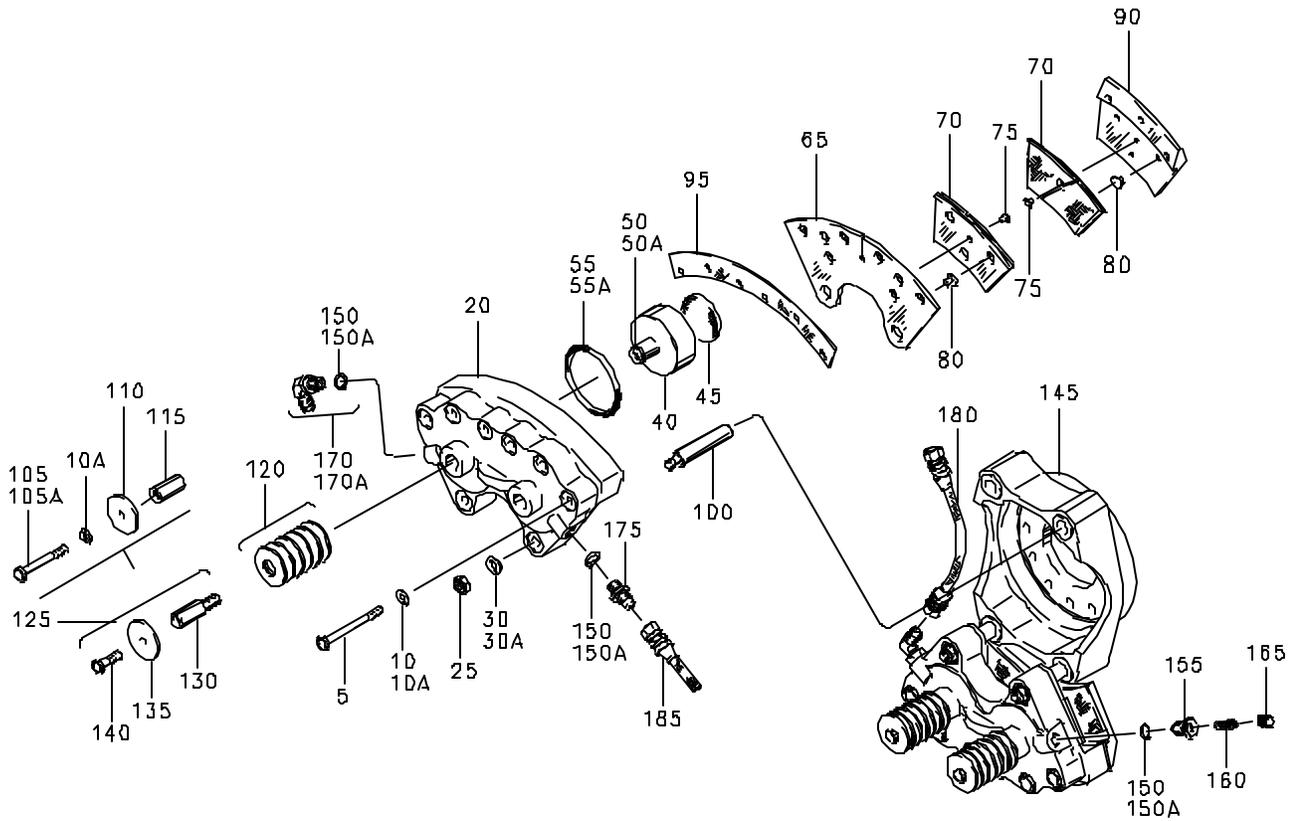

Main Brake Assembly  
30-107 / 30-107A / 30-107B  
IPL Figure 9



MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
 FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
 MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

**9. DETAILED PARTS LIST – MAIN BRAKE (30-107, 30-107A, 30-107B)**

FIG. ITEM	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFFECT CODE	UNITS PER ASSY.
9 -1	30-107	MAIN BRAKE ASSEMBLY (SUPSD BY 30-107C)	A	RF
9 -1A	30-107A (1)	MAIN BRAKE ASSEMBLY (SUPSD BY 30-107D)	B	RF
9 -1B	30-107B	MAIN BRAKE ASSEMBLY (SUPSD BY 30-107C)	C	RF
		BRAKE ATTACHING PARTS		
5	103-14500	BOLT (ABP4-24AM)		12
10	095-10400	WASHER (AN960-416)	AC	12
10A	095-10200	WASHER (AN960-416L)	AB	16
		* * *		
- 15	091-11400	ASSEMBLY, CYLINDER	A	1
- 15A	091-09900	ASSEMBLY, CYLINDER	B	1
- 15B	091-14100	ASSEMBLY, CYLINDER	C	1
20	061-09000	. CYLINDER		2
25	094-10400	. NUT (MS21044-N5)		4
30	095-10500	. WASHER (AN960-516)	AC	4
30A	095-10700	. WASHER (AN960-516L)	B	4
- 35	092-04500	. PISTON ASSEMBLY	AC	4
- 35A	092-04800	. PISTON ASSEMBLY	B	4
40	062-04700	. . PISTON		4
45	088-00100	. . INSULATOR		4
50	101-24900	. . O-RING	AC	4
50A	101-25000	. . O-RING	B	4
55	101-24200	. O-RING	AC	4
55A	101-24500	. O-RING	B	4
- Item Not Illustrated				
(1) Uses Skydrol fluid.				




MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
 FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
 MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

FIG. ITEM	PART NUMBER	NOMENCLATURE						EFFECT CODE	UNITS PER ASSY.
		1	2	3	4	5	6		
- 60	073-06200	.	ASSEMBLY, PLATE, PRESSURE						2
65	063-03500	.	. PLATE, PRESSURE						1
70	066-09000	.	. LINING						2
75	105-00200	.	. RIVET						2
80	177-01600	.	. PIN						6
- 85	074-04700	.	ASSEMBLY, PLATE, BACK						4
90	063-03500	.	. PLATE, BACK						1
70	066-09000	.	. LINING						1
75	105-00200	.	. RIVET						1
80	177-01600	.	. PIN						3
95	068-03300	.	SHIM, INSULATOR						4
100	069-01200	.	BOLT, ANCHOR						4
105	103-11500	.	BOLT				AB		4
105A	103-15300	.	BOLT				C		4
110	095-16900	.	WASHER						4
115	200-01300	.	GUIDE, SPRING						4
120	095-16800	.	SPRING, DISC				AB		56
							C		44
125	110-04900	.	ASSEMBLY, STUD (SUPSD BY Items 10A [ 30-107 & -107A only ] 105 or 105A, 110, 115)						NP
130	139-05500	.	. STUD						NP
135	095-16900	.	. WASHER						NP
140	103-10100	.	. BOLT (AN4H-5A)						NP
145	075-13400	.	ASSEMBLY, PLATE, TORQUE						1
- Item Not Illustrated									



MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

FIG. ITEM	PART NUMBER	NOMENCLATURE						EFFECT CODE	UNITS PER ASSY.
		1	2	3	4	5	6		
150	101-24600	.	O-RING					AC	4
150A	101-23000	.	O-RING					B	4
155	081-00200	.	SEAT, BLEEDER						1
160	079-00300	.	SCREW, BLEEDER						1
165	183-00100	.	CAP, BLEEDER						1
170	104-03100	.	ASSEMBLY, FITTING					AC	2
170A	104-05500	.	ASSEMBLY, FITTING					B	2
175	104-04900	.	FITTING, INLET						1
180	207-01100	.	ASSEMBLY, HOSE, LINK						1
185	207-01300	.	ASSEMBLY, HOSE, INLET						1
– Item Not Illustrated									

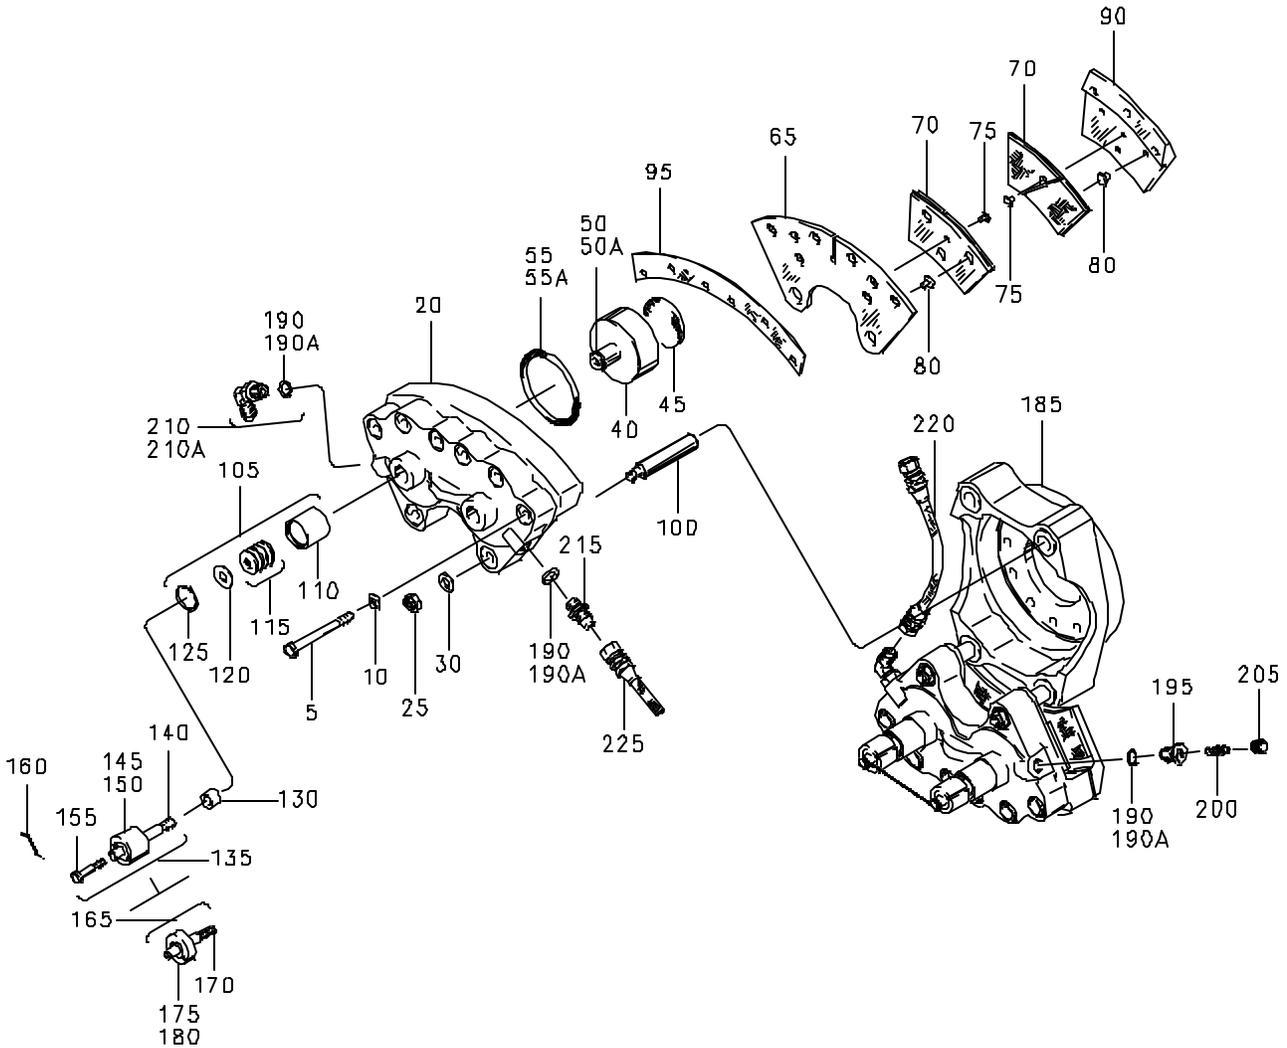

Main Brake Assembly  
30-107C / 30-107D / 30-107E  
IPL Figure 10



MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
 FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
 MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

**10. DETAILED PARTS LIST – MAIN BRAKE (30-107C, 30-107D, 30-107E)**

FIG. ITEM	PART NUMBER	NOMENCLATURE 1 2 3 4 5 6 7	EFFECT CODE	UNITS PER ASSY.
10 -1	30-107C	MAIN BRAKE ASSEMBLY (SUPSDS 30-107 and 30-107B)	A	RF
10 -1A	30-107D (1)	MAIN BRAKE ASSEMBLY (SUPSDS 30-107A)	B	RF
10 -1B	30-107E	MAIN BRAKE ASSEMBLY BRAKE ATTACHING PARTS	C	RF
5	103-14500	BOLT (ABP4-24AM)		12
10	095-10400	WASHER (AN960-416)		12
		* * *		
- 15	091-16600	ASSEMBLY, CYLINDER	A	1
- 15A	091-17000	ASSEMBLY, CYLINDER	B	1
- 15B	091-22000	ASSEMBLY, CYLINDER, LEADING	C	1
- 15C	091-22001	ASSEMBLY, CYLINDER, TRAILING	C	1
20	061-09000	. CYLINDER		2
25	094-10400	. NUT (MS21044-N5)		4
30	095-10500	. WASHER (AN960-516)	AC	4
- 35	092-04500	. PISTON ASSEMBLY	AC	4
- 35A	092-04800	. PISTON ASSEMBLY	B	4
40	062-04700	. . PISTON		4
45	088-00100	. . INSULATOR		4
50	101-24900	. . O-RING	AC	4
50A	101-25000	. . O-RING	B	4
55	101-24200	. O-RING	AC	4
55A	101-24500	. O-RING	B	4
- 60	073-06200	. ASSEMBLY, PLATE, PRESSURE		2
65	063-03500	. . PLATE, PRESSURE		1
- Item Not Illustrated				
(1) Uses Skydrol fluid.				



MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
 FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
 MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

FIG. ITEM	PART NUMBER	NOMENCLATURE						EFFECT CODE	UNITS PER ASSY.
		1	2	3	4	5	6		
70	066-09000	.	.	LINING					2
75	105-00200	.	.	RIVET					2
80	177-01600	.	.	PIN					6
- 85	074-04700	.		ASSEMBLY, PLATE, BACK					4
90	063-03500	.	.	PLATE, BACK					1
70	066-09000	.	.	LINING					1
75	105-00200	.	.	RIVET					1
80	177-01600	.	.	PIN					3
95	068-03300	.		SHIM, INSULATOR					4
100	069-01200	.		BOLT, ANCHOR					4
105	139-13300	.		ASSEMBLY, CUP, RETRACT					4
110	139-13400	.	.	CUP, RETRACT					4
115	095-03700	.	.	SPRING, DISC					32
120	095-03600	.	.	WASHER					4
125	155-08200	.	.	RING, SNAP					4
130	067-08000	.		SPACER			AB		4
135	139-13100	.		ASSEMBLY, STUD, RETRACT			AB		4
140	139-12900	.	.	STUD, RETRACT			AB		4
145	139-12800	.	.	SLEEVE, FRICTION			AB		4
150	139-12700	.	.	SLEEVE, FRICTION			AB		4
155	103-01300	.	.	BOLT			AB		4
160	139-16600	.		LOCKWIRE (MS20995-C32)					AR
165	111-11600	.		ASSEMBLY, STUD, RETRACT			C		4
170	177-04400	.	.	PIN, FRICTION			C		4
175	203-00500	.	.	RING, FRICTION			C		4
180	200-02300	.	.	COLLAR, SPRING RETAINER			C		4
- Item Not Illustrated									



MM40-107/30-107 COMPONENT MAINTENANCE MANUAL WITH IPL  
 FOR MAIN WHEEL ASSEMBLY PART NO. 40-107 SERIES AND  
 MAIN BRAKE ASSEMBLY PART NO. 30-107 SERIES

FIG. ITEM	PART NUMBER	NOMENCLATURE						EFFECT CODE	UNITS PER ASSY.
		1	2	3	4	5	6		
185	075-13400	.	ASSEMBLY,	PLATE,	TORQUE				1
190	101-24600	.	O-RING				AC		4
190A	101-23000	.	O-RING				B		4
195	081-00200	.	SEAT,	BLEEDER					1
200	079-00300	.	SCREW,	BLEEDER					1
205	183-00100	.	CAP,	BLEEDER					1
210	104-03100	.	ASSEMBLY,	FITTING			AC		2
210A	104-05500	.	ASSEMBLY,	FITTING			B		2
215	104-04900	.	FITTING,	INLET					1
220	207-01100	.	ASSEMBLY,	HOSE,	LINK				1
225	207-01300	.	ASSEMBLY,	HOSE,	INLET				1
– Item Not Illustrated									

# Cleveland

Wheels & Brakes

Parker Hannifin Corporation

**Aircraft Wheel & Brake**

1160 Center Road

Avon, Ohio 44011 USA

1-800-BRAKING (272-5464)

216-937-1272 • FAX 216-937-5409

# PRODUCT REFERENCE MEMO

## METALLIC BRAKE LINING CONDITIONING PROCEDURE

The brake lining material used in this brake assembly is an iron based metallic composition. This material must be properly conditioned (glazed) in order to provide optimum service life.

Dynamometer tests have shown that at low braking energies, unglazed linings experience greater wear and the brake discs can become severely scored.

Conditioning may be accomplished as follows:

1. Perform two (2) consecutive full stop braking applications from 30 to 35 kts. Do not allow the brake discs to cool substantially between stops.
2. On aircraft with tail wheels, exercise caution during stopping to prevent tail lifting. Due to the efficiency of these brakes, extremely hard braking could result in lifting the tail from the ground.

This conditioning procedure will wear off high spots and generate sufficient heat to glaze the linings. Once the linings are glazed, the braking system will provide many hours of maintenance free service.

Visual inspection of the brake disc will indicate the lining condition. A smooth surface, without grooves, indicates the linings are properly glazed. If the disc is rough (grooved), the linings must be reglazed. The conditioning procedure should be performed whenever the rough disc condition is evident.

Light use, such as in taxiing, will cause the glaze to be worn rapidly.

Use caution in performing this procedure, as higher speeds with successive stops could cause the brakes to overheat resulting in warped discs and/or pressure plates.

# Cleveland

Wheels & Brakes

Parker Hannifin Corporation

**Aircraft Wheel & Brake**

1160 Center Road

Avon, Ohio 44011 USA

1-800-BRAKING (272-5464)

216-937-1272 • FAX 216-937-5409

# PRODUCT REFERENCE MEMO

## AVAILABILITY OF GENERAL MAINTENANCE INFORMATION AND TORQUING PROCEDURES

**EFFECTIVITY:** All Parker Hannifin (Cleveland Wheels & Brakes) External Disc Design wheel & brake assemblies.

**APPLICABILITY:** Aircraft converted per STC approved kits to use Cleveland External Disc Design wheel & brake assemblies.

**REASON:** This PRM is issued to inform Wheel & Brake Conversion Kit users and installers that information regarding general maintenance and proper bolt / nut torquing procedures is available. This information is contained in the Cleveland Wheels & Brakes Component Maintenance Manual (CMM) and in the Cleveland Technicians Service Guide, PRM64. Most Cleveland Conversion Kits were designed prior to creation of the CMM. Parker Hannifin is in process of upgrading kit paperwork to include a requirement to use the CMM and PRM64 as wheel & brake service information. This PRM serves the same purpose for kits whose paperwork has not yet been upgraded.

**DESCRIPTION:** The Cleveland Wheels & Brakes Component Maintenance Manual and PRM64, Technician's Service Guide shall be used as service information when performing general maintenance on Cleveland External Disc Design wheels & brakes. Particular attention should be paid to instructions regarding wheel bolt torquing procedures.

**NOTE:** Refer to the CMM or PRM64 to determine the required torque procedure (Dry or Lubtork). While using the required torque procedure, observe the torque required to turn the nut (free running torque). This value must be added to the value stated on the casting or nameplate (or in the CMM or PRM64) to obtain a true torque value. Proper torque is imperative to prevent premature bolt or mating component failure.

**COMPLIANCE:** Highly Recommended.

**APPROVAL:** The engineering contents of this Product Reference Memo are FAA DER approved.

**WEIGHT & BALANCE:** Not applicable.

**PUBLICATIONS:** Cleveland Wheels & Brakes Component Maintenance Manual and PRM64 are available from:

Customer Support  
Parker Hannifin Corporation  
Aircraft Wheel & Brake  
1160 Center Road  
Avon, Ohio

Phone: 1-800- BRAKING (272-5464)  
FAX: 216-937-5409



# REGISTRO AERONAUTICO ITALIANO

DIREZIONE CERTIFICAZIONE MATERIALE AERONAUTICO

**Federal Aviation Administration**  
Department of Transportation  
U.S. Embassy  
27, Blvd. du Regent  
BRUXELLES BELGIUM

**Aircraft Wheel & Brake Division**  
**Parker Hannifin Corporation**  
1160 Center Road  
Avon, Ohio 44011  
U.S.A.

Our Ref.:96/3446/MAE  
August 21, 1996

Subject: FAA STC SA497GL - Installation of Aircraft Wheel & Brake Conversion Kits 199-80/199-80A  
Italian Validation.

Dear Sirs,

according to the existing Bilateral Airworthiness Agreement between USA and Italy, and following satisfactory accomplishment of RAI evaluation, we hereby confirm RAI validation of the FAA STC SA497GL. This validation is limited to the following models already certified in Italy:

Rockwell Commander 680F, 680FL(P), 680T, 680V, 690A, 690B.

Will you please consider RAI in the mailing list for continuous airworthiness information for the related STC installation.

Yours faithfully

MAE Director  
Ing. Filippo De Florio

CE/tc

c.c.: DD.TT. RAI



## CERTIFICADO SUPLEMENTAR DE TIPO

(Supplemental Type Certificate)

**NÚMERO**                    **2013S06-14**  
(Number)

**Este certificado, emitido com base na Lei nº 7565 "Código Brasileiro de Aeronáutica", de 19 de dezembro de 1986,**  
(This certificate, issued in the basis of the Law No. 7565 "Código Brasileiro de Aeronáutica", dated 19 December 1986,

**é conferido ao (à):**     Parker Hannifin Corporation  
(is granted to:)         Aircraft Wheel & Brake Division  
                                  1160 Center Road  
                                  Avon, Ohio 44011  
                                  USA

**por ter a modificação ao projeto de tipo do produto abaixo citado, observadas as limitações e condições**  
(for having the change to the type design of the product mentioned below, with the limitations and conditions therefor as)

**especificadas, satisfeito aos requisitos de aeronavegabilidade aplicáveis.**  
(specified hereon, met the applicable airworthiness requirements.)

**Produto Original - Número do Certificado de Tipo: 2A4 (FAA).**  
(Original Product - Type Certificate No:)

**Fabricante:**             Twin Commander.  
(Manufacturer:)

**Modelo(s):**             560F, 680F, 680V, 680FL, 680W, 681, 690, 690A, 690B,  
(Model(s):)             690C, 690D, 695 and 695A.

**DESCRIÇÃO DA MODIFICAÇÃO AO PROJETO DE TIPO:**  
(Description of Type Design Change:)

Installation of Aircraft Wheel & Brake Conversion Kit 199-80, Rev. K, dated 18 Apr. 2007 or later approved revisions (MIL-H-5606 system) in accordance with Cleveland Wheels & Brakes Installation Drawing No. 50-51, Rev. L, dated 04 Feb. 2002, or later revisions; or Installation of Aircraft Wheel & Brake Conversion Kit 199-80A, Rev. F, dated 18 Apr. 2007 or later approved revisions (Skydrol System) in accordance with Cleveland Wheels & Brakes Installation Drawing No. 50-52, Rev. L, dated 14 Dec. 1984, or later approved revisions.

This CST validates in Brazil the STC # SA497GL, issued by FAA (USA).

**LIMITAÇÕES E CONDIÇÕES:**  
(Limitations and Conditions:)

See continuation sheet for applicable data.

**DATAS:**  
(Dates of:)

**Do Requerimento:** 25 Apr. 2013  
(Application:)

**Da emissão:** 27 June 2013  
(Issuance:)

**Da reemissão:**  
(Reissuance:)

**Da emenda:**  
(Amendment:)

  
**HÉLIO TARQUINIO JÚNIOR**

Gerente-Geral, Certificação de Produto Aeronáutico  
(General Manager, Aeronautical Product Certification)

  
**DINO ISHIKURA**

Superintendente de Aeronavegabilidade  
(Airworthiness Superintendent)



Folha de Continuação ao  
(Continuation Sheet to)

**CERTIFICADO SUPLEMENTAR DE TIPO**  
(Supplemental Type Certificate)

**NÚMERO 2013S06-14**  
(Number)

**LIMITAÇÕES E CONDIÇÕES:**  
(Limitations and Conditions:)

- I. The approval of this type design change should not be extended to other aircraft of this model on which other previously approved modifications are incorporated unless it is determined by the installer that the relationship between this change and any of those other previously approved modifications, including changes in Type Design, will introduce no adverse effect upon the airworthiness of that aircraft.
- II. If the holder agrees to permit another person to use this certificate to alter the product, the holder shall give the other person written evidence of that permission.
- III. A copy of this Certificate shall be maintained as part of the permanent records of the modified aircraft.

-----END-----

NOV 18 1991

Our Reference: F91/1247



Aircraft Wheel & Brake Division  
Parker Hannifin Corporation  
1160 Center Road  
Avon, Ohio 44011  
USA

GPO Box 367 Canberra ACT 2601  
Australia  
Telephone (06) 268 4111  
Telex 62221  
Fax (06) 268 5683

Dear Sir,

I refer to FAA STC SA 497 GL Install Aircraft Wheel and Brake Conversion Kit 199-80..

The STC has been accepted for the Rockwell Commander 560F, 680F, 680FL(P), 680T, 680V, 680FL, 680W, 681, 685, 690, 690A, 690B, 690C, 690D, 695, 695A and 695B specified in the FAA STC and has been entered in the register of Australian Approved Foreign STC's.

Yours faithfully,

A handwritten signature in black ink, appearing to read 'C. Torkington'. The signature is written in a cursive style.

(C.Torkington)  
Manager  
Airworthiness and Operations

8 November 1991



Parker Hannifin Corporation  
Aerospace/Aircraft Wheel & Brake  
1160 Center Road  
Avon, OH 44011

Date: \_ \_/\_/\_/20\_ \_

Subject: Letter of Authorization for Installation of STC'd Conversion Kits

To whom it may concern:

Parker Hannifin Corporation, Aircraft Wheel & Brake Division, hereby states that the following item(s):

KIT NUMBER: 199-\_\_\_\_\_

FAA APPROVAL: 1) STC # \_\_\_\_\_

NO OTHER APPROVALS NECESSARY

AUTHORIZATION TO INSTALL: With the sale of this STC KIT, OWNER of the Supplemental Type Certificate agrees to permit the buyer or buyer's agent or agency to use the certificate to alter the product under the terms and conditions of this STC.

A/C MAKE: \_\_\_\_\_

A/C MODEL \_\_\_\_\_

TAIL # \_\_\_\_\_

Regards,

Technical Support Team  
Technical Hotline (800) 272-5464  
[Clevelandwbhelp@parker.com](mailto:Clevelandwbhelp@parker.com)  
Web-site: [www.clevelandwheelandbrake.com](http://www.clevelandwheelandbrake.com)  
Manufacturer of Cleveland Wheels & Brakes

United States of America  
Department of Transportation — Federal Aviation Administration  
**Supplemental Type Certificate**

*Number* SA497GL

*This certificate, issued to* Aircraft Wheel & Brake Division  
Parker Hannifin Corporation  
1160 Center Road  
Avon, Ohio 44011

*certifies that the change in the type design for the following product with the limitations and conditions therefor as specified hereon meets the airworthiness requirements of Part 3 of the Civil Air Regulations.* See Type Certificate Data Sheet 2A4 for complete certification basis.

*Original Product — Type Certificate Number* 2A4  
*Make* Rockwell Commander  
*Model* 560F, 680F, 680FL(P), 680T, 680V, 680FL, 680W, 681, 685, 690, 690A, 690B, 690C, 690D, 695, 695A, and 695B

*Description of Type Design Change*

Install Aircraft Wheel & Brake Conversion Kit 199-80, revision H, dated December 16, 1985 (MIL-H-5606 System) in accordance with Cleveland Wheels & Brakes Installation Drawing 50-51, revision K, dated December 16, 1985, or 199-80A, revision E, dated December 14, 1984, (Skydrol System) in accordance with Cleveland Wheels & Brakes Installation Drawing 50-52, revision H, dated December 14, 1984, or other FAA approved revisions of Kits 199-80 and 199-80A, and installation drawings 50-51 and 50-52.

*Limitations and Conditions*

This STC approval should not be incorporated in any aircraft of these specific models on which other approved modifications are incorporated, unless it is determined that the interrelationship between this change and any of those previously incorporated approved modifications will not introduce any adverse effect upon the airworthiness of the aircraft.

*This certificate and the supporting data which is the basis for approval shall remain in effect until surrendered, suspended, revoked, or a termination date is otherwise established by the Administrator of the Federal Aviation Administration.*

*Date of application* December 16, 1980

*Date issued*

*Date of issuance* January 23, 1981

April 1, 1981, June 17, 1981  
*Date amended* February 6, 1985, January 8, 1986



*By direction of the Administrator*  
*W. F. Horn*  
W. F. Horn (Signature)

Manager, Chicago Aircraft Certification Office  
Central Region, ACE-115C

(Title)

*Any alteration of this certificate is punishable by a fine of not exceeding \$1,000, or imprisonment not exceeding 3 years, or both.*