10-19, 10-19A, 10-19B, 10-19D, 10-19F, 10-19G, 10-19H, 10-19J, 10-20, 10-20A, 10-22, 10-22A, 10-22B

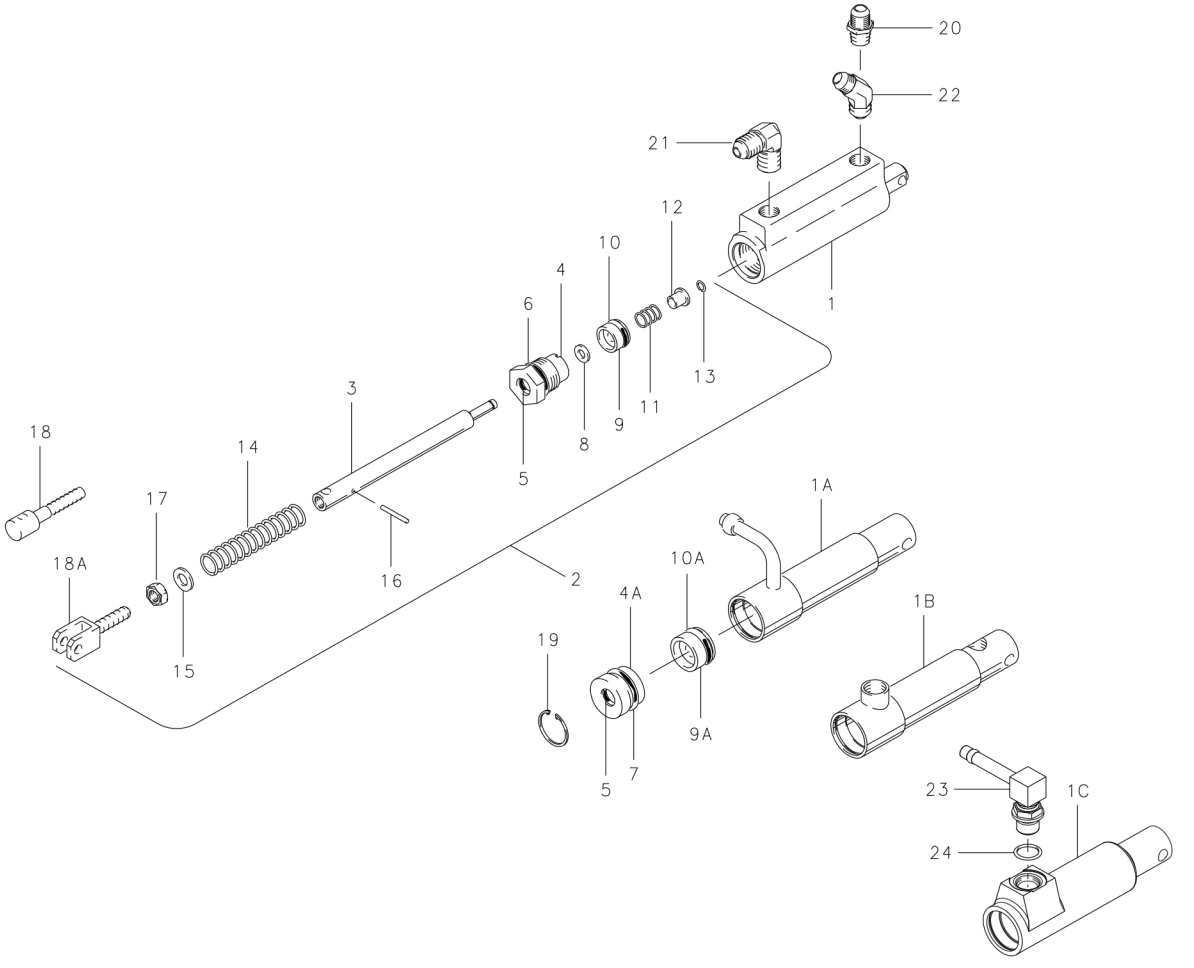

NOTE: Parts list for reference only. Contact airframe manufacturer to order master cylinders and components listed.

			PER ASSY.											
FIG.	PART NO.	DESCRIPTION	10-19	10-19A (1)	10-19B (1)	10-19D	10-19F	10-19G	10-19H	10-19J	10-20	10-20A	10-22	10-22A	10-22B
1	144-01204	Cylinder Body (3)	1			1									
	144-01206	Cylinder Body (4)					1	1	1						
	(2)	Cylinder Assembly		1	1										
	144-01201	Cylinder Body										1			
	144-01203	Cylinder Body								1	1				
1A	189-00900	Cylinder Assembly											1		
1B	189-00901	Cylinder Assembly												1	
1C	144-13600	Cylinder Body													1

(Continued on next page)

10-19, 10-19A, 10-19B, 10-19D, 10-19F, 10-19G, 10-19H, 10-19J, 10-20, 10-20A, 10-22, 10-22A, 10-22B

(Continued from previous page)

			PER ASSY.											
FIG.	PART NO.	DESCRIPTION	10-19	10-19A (1)	10-19B (1)	10-19D	10-19F	10-19G	10-19H	10-19J	10-20	10-20A	10-22	10-22A	10-22B
2	182-00300	Piston Rod Assembly	1	1	1	1									
	182-00700	Piston Rod Assembly											1	1	1
	182-02600	Piston Rod Assembly					1		1	1					
	182-04100	Piston Rod Assembly						1							
3	142-00500	Rod-Piston	1	1	1	1	1		1	1					
	142-00800	Rod-Piston									1	1			
	142-00900	Rod-Piston											1	1	1
	142-02800	Rod-Piston						1							
4	141-00500	End Gland	1	1	1	1	1	1	1	1	1	1			
4A	141-01000	End Gland											1	1	1
5	101-00700	O-Ring (MS28775-012)	1	1	1	1	1	1	1	1	1	1	1	1	1
6	101-01100	O-Ring (MS28775-113)	1	1	1	1	1	1	1	1	1	1			
7	101-01200	O-Ring (MS28775-114)											1	1	1
8	095-01100	Washer-Seal	1	1	1	1	1	1	1	1	1	1	1	1	1
9	148-00900	Piston	1	1	1	1	1	1	1	1	1	1			
9A	148-01000	Piston											1	1	1
10	101-00800	O-Ring-Piston (MS28775-110)	1	1	1	1	1	1	1	1	1	1			
10A	101-01100	O-Ring-Piston (MS28775-113)											1	1	1
11	082-00800	Spring-Piston	1	1	1	1	1	1	1	1	1	1	1	1	1
12	145-01500	Bushing	1	1	1	1	1	1	1	1	1	1	1	1	1
13	155-00500	Snap Ring	1	1	1	1	1	1	1	1	1	1	1	1	1
14	082-00900	Spring-Return	1	1	1	1	1	1	1	1	1	1	1	1	1
15	095-10200	Washer (AN960-416L)	1	1	1	1	1	1	1	1					
	095-10600	Washer (AN960-616)									1	1	1	1	1
16	223-00100	Roll-Pin									1	1	1	1	1
17	094-03000	Nut-Check (AN316-4)	1	1	1	1	1	1	1	1					
18	143-00400	Clevis	1	1		1									
18A	143-00900	Clevis					1	1	1	1					
19	155-01000	Snap Ring											1	1	1
20	104-00300	Tube Fitting (AN816-4D)					1								
21	104-00400	Tube Fitting (MS20822-4D)	2	2	1				2						
22	104-00500	Tube Fitting (MS20823-4D)			1										
23	104-06900	Fitting													1
24	101-20400	O-Ring													1

	199-505	Repair Kit (5, 8, 10, 10A)	1	1		1	1	1	1	1	1	1			
	199-507	Repair Kit (5, 6, 7, 8, 13, 15)											1	1	1

NOTES:

(1) Inactive Assembly - Spares support only for parts listed.

(2) Inactive Part - No longer available for spares support.

(3) Extruded body – formerly used steel body P/N 189-00500 which is no longer available.

(4) Extruded body – formerly used steel body P/N 189-00501 which is no longer available.